


Thermal Fuse Harness and Sensor Harness Replacement

The thermal fuse harness and the sensor harness on models R/C85, R/C53i, and R70 are being changed. The old thermal fuse harness and old sensor harness are attached with 1 connector. In the new configuration the attachment is with 2 connectors.

| Model | Old Thermal Fuse Harness (1 connector) | Old Sensor Harness (1 connector) | New Thermal Fuse Harness (2 connectors) | New Sensor Harness (2 connectors) |
|----------------------|--|----------------------------------|---|-----------------------------------|
| R/C85, 2532FFU(C) | U245-610 | U245-603 * | U245-3190 * | U245-603-6 |
| R/C85, 2532W(C) | U245-610 | U245-603-2 * | U245-3190 * | U245-603-7 |
| R/C53i, 2520FFU(C) | U245-610 | U245-603-4 * | U245-3190 * | U245-603-9 |
| R70e, 2526W | U245-610 | U245-603-5 * | U245-3190 * | U245-603-10 |
| R/C85PLUS, 2532FFUD | NA | NA | U245-3190 * | U245-603-6 |
| R/C85PLUS, 2532WD | NA | NA | U245-3190 * | U245-603-7 |
| R/C53iPLUS, 2520FFUD | NA | NA | U245-3190 * | U245-603-9 |

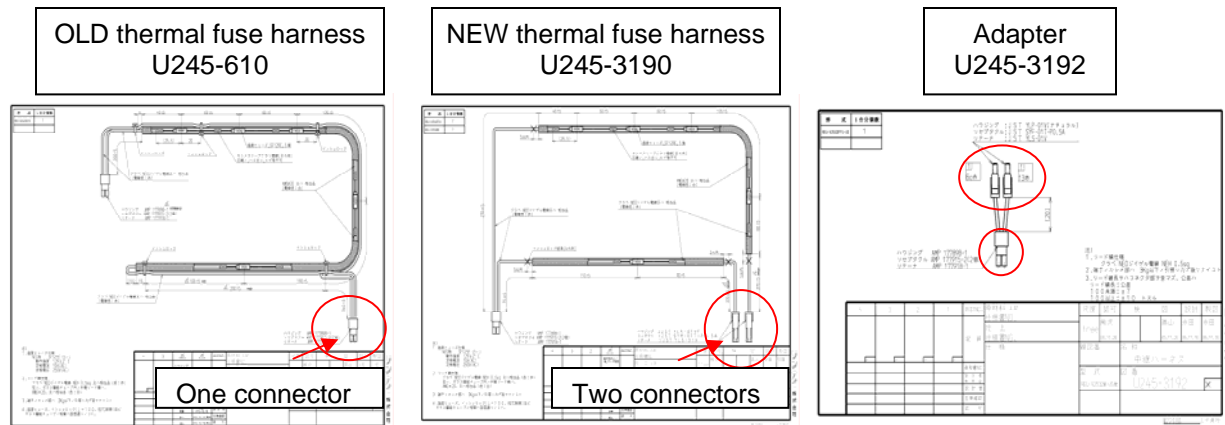

Replacing the harness:

An adapter (P/N U245-3192) will be boxed with the new thermal fuse harness and the old sensor harness in order to ensure compatibility when replacing either harness. The adapter will also be available as a separate item. **Use the adapter as needed depending on the harness configuration.**

At some point in the future, when a sensor harness is ordered, both the new harness (2 connectors) and old harness (1 connector) will be sent together. **Use the sensor harness with the same number of connectors for your harness configuration and discard the other sensor harness.**

The Designer Plus models, R/C85PLUS and R/C53PLUS, have the new thermal fuse harness and new sensor harness as part of its original design (2 connectors).