allergic reaction to mold? dustmites? musty odors? feeling clammy?

Create a Comfortable and Healthy Home!



4022200

- Energy Star efficient.
- High capacity effective dehumidification: up to 100 pints of water a day.
- MERV-11 filtration. MERV-14 optional.
- Sized for 2500 sq. ft. home.

Moisture in the home has many sources: people, pets, plants, cooking, washing, ground water, and infiltration of outside air. Too much moisture in the home can create musty odors and can also stimulate the growth of mold, mildew, bacteria, and other biological allergens.

WHOLE HOUSE VENTILATING DEHUMIDIFICATION

To avoid the problems caused by moisture, and create a comfortable environment, a dehumidifier is necessary to maintain relative humidity between 45-50% throughout the home. Only supplemental dehumidification provides indoor humidity control regardless of air conditioner operation or outside moisture conditions.

The highly efficient Ultra-Aire 100V utilizes refrigeration to cool the incoming air stream below its dew point. This cooled and drier air is used to pre-cool the incoming air stream resulting in a significant increase in overall efficiency. After the pre-cooling stage, the processed air is reheated by passing through the condenser coil. The heat removed by the evaporator coil is returned to the air stream, resulting in an overall temperature increase of the air leaving the unit.

The Ultra-Aire 100V is controlled by a variety of 24 volt remote wired controls. A variety of controls are available suitable to various applications.

FRESH AIR VENTILATION

Optional fresh outdoor air may be ducted to the unit via a six inch round duct. This provides fresh air to dilute pollutants and maintain high oxygen content in the air. The amount of fresh air ventilation can be regulated by a variety of dampers and controls.

AIR FILTRATION

The Ultra-Aire 100V includes air filtration to improve indoor air quality. A MERV-11 media filter is standard. An optional MERV-14 deep pleated 95% media filter is available for optimum air filtration and to reduce potentially harmful airborne particles. If the optional filter is chosen, the standard filter operates as a prefilter.

Specifications and Installation

Part Num	hor	4022200		
	IVCI .			
Blower:			240 CFM @ 0.1" WG	
Supply Voltage:		115 Volt – 1 Phase – 60 Hz.		
Amps:		6.3		
Energy Factor:		2.6		
Operating Temp.:		56°F Min, 100°F Max		
Sized For:		2500 Square Foot Typical		
Minimun	n Performa	ance at Set (Conditions	
Intake Air:		80°F, 60% RH		
Capacity:		100 Pints/Day @ 80°F/60% RH		
Pints/kWh	:	5.5		
UA-100V	Duct Conn	ections:		
6" Round	Inlet			
8" Round	Inlet			
8" Round	Outlet			
Filter Efficiency:		Standard MERV-11 (65% ASHRAE Dust Spot) Optional MERV-14 (95% ASHRAE Dust Spot)		
Power Cord:		9', 115V With Ground		
Drain Connection:		.56" ID x 8' Vinyl Hose		
UA-100V	Dimensior	IS:		
	Unit		Shipping	
Width:	21" witho	out collars	30"	
	24" with	collars		
Height:	42" witho	out collars	47"	
	48" with	collars		
Depth:	17"		25"	
Weight:	119 lbs		134 lbs	

OPTION	AL ACCESSORIES
4022220	Condensate Pump Kit
4023660	DEH 3000 Digital Humidity Controller
4022486	Timer, 7-Day, 24 Vac, Programmable
4021475	Merv 11 Standard Filter 16" x 20"x 2"
4022489	Merv 14 95% Efficient Filter 16" x 20" x 4"

Length:	24"
Height:	19 15/16"
Width:	14 1/4" with collars; 7 3/4" without collars
Weight:	19 lbs

Filter Box Duct Connections:

6" Round Inlet


8" Round Inlet

8" Round Outlet

Optional MERV-14 (95% ASHRAE Dust Spot)

INSTALLATION MATERIALS

Control Options	Part Number
DEH 3000 - Digital Control	4028539
DEH 3000R - Digital Control	4028407
Ducting Options	
6", 2 wire 24 volt Electric Air Damper	4023672
8" Backdraft Damper	4024375
8" Starting Collar (Included w/ Unit)	N/A
6" Outside Air Intake Vent (Not Provided)	N/A
Duct Tape (Not Provided)	N/A
Large Cable Ties (Not Provided)	N/A
Insulated 6" Air Duct (Flex) - 25 ft.	4020128
Insulated 8" Air Duct (Flex) - 25 ft.	4022126
Plumbing - Not Provided By Therma-Stor	
3/4" PVC Pipe	
3/4" PVC Threaded Nipple	
3/4" PVC Elbow	
PVC Primer and Glue	
Electrical - Not Provided By Therma-Stor	
12-2 Non-Metallic Sheeted NM-B (Romex) Wi	re
20 AMP 120 Volt Single Pole Breaker	
20 AMP 120 Volt Rated (3) Prong Outlet	
Thermostat Wire (5Conductor, 18 AWG)	
Wire Staples	
Outlet Cover	
Outlet Box	

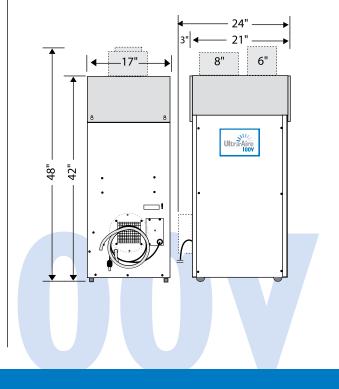


Ultra-Aire 100V

Preferred installation is to draw air from a separate intake duct located in the central part of the home. Duct the outlet air into the supply duct for distribution throughout the home. A backdraft damper prevents air from the supply duct from being pushed backward through the UA-100V when central (A/C) fan is on and the Ultra-Aire fan is off.

Therma-Stor does not recommend drawing air from the return ducting system and discharging into the supply for two reasons:


Central Fan On: The UA-100V is pulling against a negative pressure (intake side) and discharging against a positive pressure (outlet side), which results in lower airflow and reduced capacity.

Central Fan Off: Discharge air may counter-flow from the supply duct directly to the return duct and not be distributed throughout the home effectively.

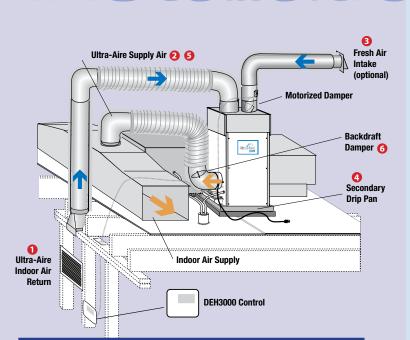

UA 100V ATTIC INSTALLATION

- 1. Indoor air return should come from an open area of the first or second floor.
- 2. The Ultra-Aire supply should be ducted into the forced air system past the air conditioning coil. The duct connection should be perpendicular to the air flow.
- The optional six inch fresh air intake should be located at least six feet away from any exhaust ports, such as, dryer, range hood, or combustion device exhaust. Intake location should be consistent with local codes.
- 4. If placed in a high humidity location, an optional insulation kit is available to prevent condensation occurring on the Ultra-Aire cabinet. Use of a secondary drip pan is recommended.
- 5. A section of flex duct or vibration absorbing duct should be located between the connections of the Ultra-Aire ductwork and the forced air system ductwork.
- 6. The backdraft damper prevents counter-flow of the A/C supply air through the UA-100V.

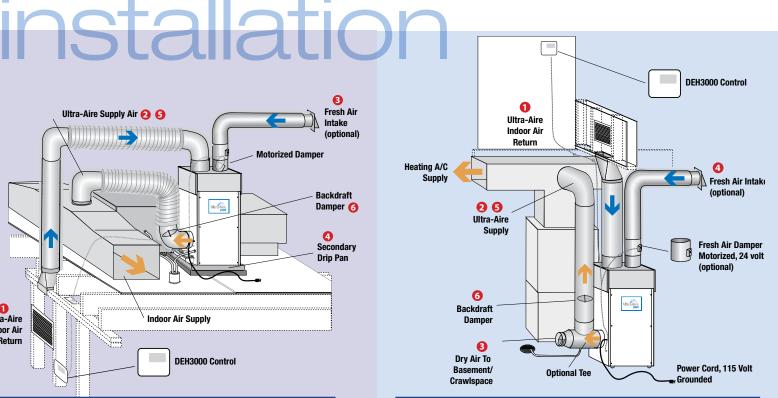

UA 100V BASEMENT CRAWL/SPACE INSTALLATION

- 1. Indoor air return should come from an open area of the first or second floor.
- 2. The Ultra-Aire supply should be ducted into the forced air system supply beyond the air conditioning coil. The duct connection should be perpendicular to the air flow.
- 3. An optional eight inch tee fitting with an adjustable blade damper on the straight run may be attached at the Ultra-Aire supply duct. This allows for increased air flow to the basement/crawlspace during the summer months.
- 4. The optional six inch fresh air intake should be located at least six feet away from any exhaust ports, such as, dryer, range hood, or combustion device exhaust. Intake location should be consistent with local codes.
- 5. A section of flex duct or vibration absorbing duct should be located between the connections of the Ultra-Aire ductwork and the forced air system ductwork.
- 6. The backdraft damper prevents counter-flow of the A/C supply air through the UA-100V.

Additional Ultra-Aire Accessories



4026208

Do you know the relative humidity levels in your home?

The Humidity Alert[™] was designed to discriminate between occasional periods of high humidity and the prolonged periods that create a risk of unhealthy biological activity. It's a simple, inexpensive device that monitors temperature and relative humidity conditions and records data that is known to contribute to **wood rot, mold growth, musty**

odors and increased pest activity.

Easy to use:

1. Place the meter in the desired space.

2. Collect the necessary humidity data.



4028539

Ultra-Aire Digital Controller

You will enjoy the comfort that comes with precise regulation of your indoor environment with our new **DEH 3000 Digital Control**. This control will allow you the ability to monitor and control relative humidity levels in your home. The DEH 3000 is designed to accommodate your personal comfort level.

This unit replaces the DEH 2000 Digital Control. To be used with the Ultra-Aire Whole House Ventilating Dehumidifiers.