


Applicable Models:

All Models


Description: Eternal's metal crate from the packaging can be re-used as bracketing to secure the unit against tipping during earthquakes. The brackets are pre-marked at factory and mounting holes are pre-drilled.

Earthquake Bracket Mounting Procedure

Locate the factory markings on the Eternal packaging frame.

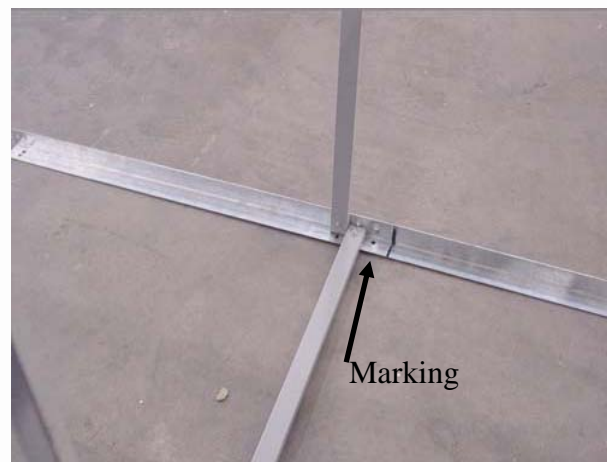

Cut the bracket loose from the metal crate.

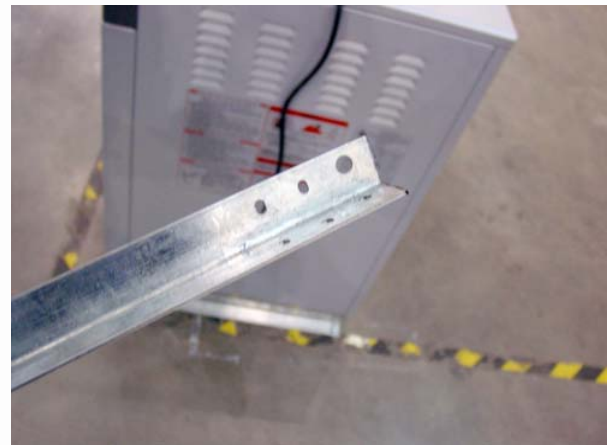

Loosen two screws from the bottom edge of Eternal's frame.

Attach the earthquake bracket by re-using the screws loosened from previous step. Repeat process for the opposite side of the unit.

The unit can be bolted to solid ground or framing of the structure via the bracket. This will prevent the unit from tipping in the event of an earthquake



Note: Additional earthquake strapping support can be added by attaching brackets or strapping to the rear panel chassis screws.



Consumer Notice: The information and instruction in this bulletin are intended for use by skilled professionals. These instructions should not be performed by consumers. Call your professional person for help.