

# INSTALLATION INSTRUCTIONS & PARTS LIST POWER VENTED ENERPAK GAS FIRED PROPELLER UNIT HEATERS

**ATTENTION: READ THIS MANUAL AND ALL LABELS ATTACHED TO THE UNIT CAREFULLY BEFORE ATTEMPTING TO INSTALL, OPERATE OR SERVICE THESE UNITS! CHECK UNIT DATA PLATE FOR TYPE OF GAS AND ELECTRICAL SPECIFICATIONS AND MAKE CERTAIN THAT THESE AGREE WITH THOSE AT POINT OF INSTALLATION. RECORD THE UNIT MODEL AND SERIAL No.(s) IN THE SPACE PROVIDED. RETAIN FOR FUTURE REFERENCE.**

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

### FOR YOUR SAFETY

The use and storage of gasoline or other flammable vapors and liquids in open containers in the vicinity of this appliance is hazardous.



### FOR YOUR SAFETY

- If you smell gas:
1. Open windows.
  2. Don't touch electrical switches.
  3. Extinguish any open flame.
  4. Immediately call your gas supplier.



**▲ WARNING** Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

### APPROVED FOR USE IN CALIFORNIA

**▲ WARNING** Install, operate and maintain unit in accordance with manufacturer's instructions to avoid exposure to fuel substances or substances from incomplete combustion which can cause death or serious illness. The state of California has determined that these substances may cause cancer, birth defects, or other reproductive harm.

### INSTALLER'S RESPONSIBILITY

**Installer Please Note:** This equipment has been test fired and inspected. It has been shipped free from defects from our factory. However, during shipment and installation, problems such as loose wires, leaks or loose fasteners may occur. **It is the installer's responsibility to inspect and correct any problems that may be found.**

### RECEIVING INSTRUCTIONS

Inspect shipment immediately when received to determine if any damage has occurred to the unit during shipment. After the unit has been uncrated, check for any visible damage to the unit. If any damage is found, the consignee should sign the bill of lading indicating such damage and immediately file claim for damage with the transportation company.



260 NORTH ELM ST., WESTFIELD, MA 01085  
TEL: (413) 564-5540 FAX: (413) 562-5311

www.sterlinghvac.com  A MESTEK COMPANY

MODELS: QVEF (30, 45, 60, 75, 100, 125, 150, 175, 200, 225, 250, 300, 350, 400) (S,M)

# TABLE OF CONTENTS

SPECIFICATIONS	ELECTRICAL CONNECTIONS .....	9
Basic Description .....	VENTING.....	10, 11, 12, 13
Performance & Specification Data.....	OPERATION	
GENERAL SAFETY INFORMATION	Spark Ignition.....	14, 15
Installation Codes (throughout manual).....	Main Burner Orifice Schedule.....	16
Special Precautions .....	Adjustments.....	16,17
INSTALLATION	MAINTENANCE	
Locating Units.....	Servicing & Cleaning .....	17
Proper Clearances.....	TROUBLESHOOTING GUIDE .....	18, 19, 20, 21
Suspension of Units.....	IDENTIFICATION OF PARTS.....	4, 15, 22, 23, 24
Combustion Air .....	Replacement Parts .....	25
Gas Supply Piping.....	WARRANTY .....	25
Pipe Installation .....	INSPECTION SHEET.....	27


**NOTICE: It is the owner's responsibility to provide any scaffolding or other apparatus required to perform emergency service or annual/periodic maintenance to this equipment.**

## DESCRIPTION

The Power Vented gas unit heater is a factory assembled, power vented, low static pressure type propeller fan heater designed to be suspended within the space to be heated. THESE HEATERS ARE NOT TO BE CONNECTED TO DUCTWORK. The designs are certified

by CSA International as providing a minimum of 80% thermal efficiency, and approved for use in California. **Do not alter these units in any way.** If you have any questions after reading this manual, contact the manufacturer.

**Figure 1 - Power Vented Propeller Unit Heaters**

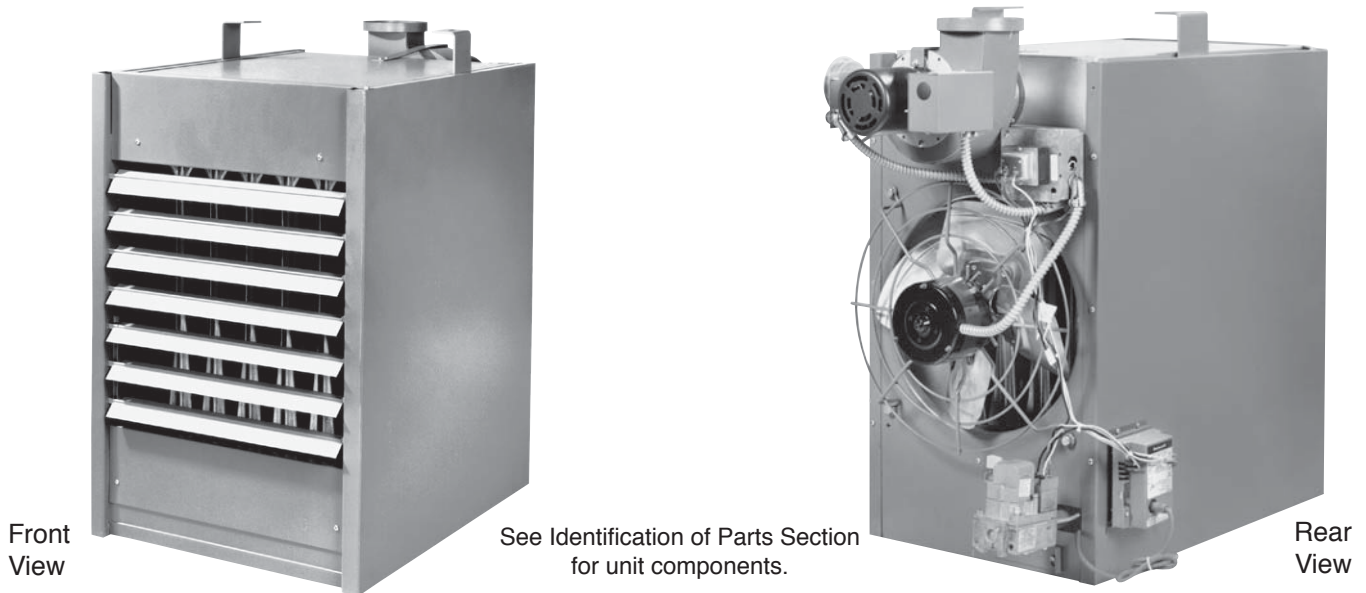

The following terms are used throughout this manual, in addition to CSA International requirements, to bring attention to the presence of potential hazards or to important information concerning the product:

**▲ DANGER** Indicates an imminently hazardous situation which, if not avoided, will result in death, serious injury or substantial property damage.

**▲ WARNING** Indicates an imminently hazardous situation which, if not avoided, could result in death, serious injury or substantial property damage.

**▲ CAUTION** Indicates an imminently hazardous situation which, if not avoided, may result in minor injury or property damage.

**NOTICE:** Used to notify of special instructions on installation, operation or maintenance which are important to equipment but not related to personal injury hazards.

## GENERAL SAFETY INFORMATION

**▲ WARNING** Failure to comply with the general safety information may result in extensive property damage, severe personal injury or death.

**▲ WARNING** This product must be installed by a licensed plumber or gas fitter when installed within the Commonwealth of Massachusetts.

Installation must be made in accordance with local codes, or in absence of local codes with the latest edition of ANSI Standard Z223.1 (N.F.P.A. No.54) National Fuel Gas Code. All of the ANSI and NFPA Standards referred to in these installation instructions are those that were applicable at the time the design of this appliance was certified. The ANSI Standards are available from the American National Standards Institute, Inc., 11 West 42nd Street, New York, NY, 10036 or www.ansi.org. The NFPA Standards are available from the National Fire Protection Association, Batterymarch Park, Quincy, MA 02269. These unit heaters are designed for use in airplane hangars when installed in accordance with ANSI/NFPA No. 409 and in public garages when installed in accordance with NFPA No. 88A and NFPA No. 88B.

If installed in Canada, the installation must conform with local building codes, or in absence of local building codes, with CGA-B149.1 "Installation Codes for Natural Gas Burning Appliances and Equipment" or CGA-B149.2 "Installation Codes for Propane Gas Burning Appliances and Equipment". These Unit Heaters have been designed and certified to comply with CGA 2.6. Also see sections on installation in AIRCRAFT HANGARS and PUBLIC GARAGES.

**▲ WARNING** Do not alter the unit heater in any way or damage to the unit and/or severe personal injury or death may occur!

**▲ WARNING** Disconnect all power and gas supplies before installing or servicing the heater. If the power disconnect is out of sight, lock it in the open position and tag it to prevent unexpected application of power. Failure to do so could result in fatal electric shock, or severe personal injury.

**▲ CAUTION** Ensure that all power sources conform to the requirements of the unit heater or damage to the unit will result!

Follow installation instructions CAREFULLY to avoid creating unsafe conditions. All external wiring must conform to applicable current local codes, and to the latest edition of the National Electric Code ANSI/NFPA No. 70. In Canada, all external wiring must conform to the Canadian Electric Code, Part 1 CSA Standard C22.1. All wiring should be done and checked by a qualified electrician, using copper wire only. All gas connections should be made and leak-tested by a suitably qualified individual, per instructions in this manual. Also follow procedures listed on the "Gas Equipment Start-Up Sheet" located in this manual.

Use only the fuel for which the heater is designed (see rating plate). Using LP gas in a heater that requires natural gas, or vice versa, will create the risk of gas leaks, carbon monoxide poisoning and explosion.

**▲ WARNING** Do not attempt to convert the heater for use with a fuel other than the one intended. Such conversion is dangerous, as it will create the risks listed previously.

Make certain that the power source conforms to the electrical requirements of the heater.

**▲ WARNING** Do not depend upon a thermostat or other switch as sole means of disconnecting power when installing or servicing heater. Always disconnect power at main circuit breaker as described above. Failure to do so could result in fatal electric shock.

Special attention must be given to any grounding information pertaining to this heater. To prevent the risk of electrocution, the heater must be securely and adequately grounded. This should be accomplished by connecting a grounded conductor between the service panel and the heater. To ensure a proper ground, the grounding means must be tested by a qualified electrician.

Do not insert fingers or foreign objects into the heater or its air moving device. Do not block or tamper with the heater in any manner while in operation or just after it has been turned off, as some parts may be hot enough to cause injury.

This heater is intended for general heating applications ONLY. It must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden or wet atmospheres.

Do not attach ductwork to this product or use it as a makeup air heater. Such usage voids the warranty and will create unsafe operation.

In cases in which property damage may result from malfunction of the heater, a backup system or a temperature sensitive alarm should be used.

**▲ CAUTION** The open end of piping systems being purged shall not discharge into areas where there are sources of ignition or into confined spaces UNLESS precautions are taken as follows: (1) by ventilation of the space, (2) control of purging rate, (3) elimination of all hazardous conditions. All precautions must be taken to perform this operation in a safe manner!

Unless otherwise specified, the following conversions may be used for calculating SI unit measurements:

1 foot = 0.305 m	1 inch water column = 0.249 kPa
1 inch = 25.4 mm	meter/second = FPM ÷ 196.8
1 psig = 6.894 kPa	liter/second = CFM x 0.472
1 pound = 0.453 kg	1000 Btu per hour = 0.293 kW
1 gallon = 3.785 L	1000 Btu/Cu. Ft. = 37.5 MJ/m <sup>3</sup>
	1 cubic foot = 0.028 m <sup>3</sup>


**Table 1 – Performance and Specification Data – Power Vented Propeller Unit Heater**

Unit Size	30	45	60	75	100	125	150	175	200	225	250	300	350	400
<b>PERFORMANCE DATA ‡</b>														
Input BTU/Hr	30,000	45,000	60,000	75,000	100,000	125,000	150,000	175,000	200,000	225,000	250,000	300,000	350,000	400,000
(kW)	(8.8)	(13.2)	(17.6)	(22.0)	(29.3)	(36.6)	(43.9)	(51.2)	(58.6)	(65.9)	(73.2)	(87.8)	(102.5)	(117.1)
Output BTU/Hr	24,000	36,000	48,000	60,000	80,000	100,000	120,000	140,000	160,000	180,000	200,000	240,000	280,000	320,000
(kW)	(7.0)	(10.5)	(14.1)	(17.6)	(23.4)	(29.3)	(35.1)	(41.0)	(46.9)	(52.7)	(58.6)	(70.3)	(82.0)	(93.7)
Thermal Efficiency (%)	80	80	80	80	80	80	80	80	80	80	80	80	80	80
Free Air Delivery CFM	750	800	1,050	1,100	1,480	1,650	2,200	2,530	2,640	2,700	3,100	4,400	5,000	5,300
(cu. m/s)	(0.354)	(0.378)	(0.496)	(0.519)	(0.699)	(0.779)	(1.038)	(1.194)	(1.246)	(1.274)	(1.463)	(2.077)	(2.360)	(2.502)
Air Temperature Rise Deg. F	30	42	42	50	50	56	50	51	56	61	60	50	52	56
(Deg. C)	(17)	(23)	(23)	(28)	(28)	(31)	(28)	(28)	(31)	(34)	(33)	(28)	(29)	(31)
Outlet Velocity FPM	680	720	610	640	775	910	1,045	1,070	1,010	950	980	1,100	1,150	1,050
(m/s)	(3.45)	(3.66)	(3.10)	(3.25)	(3.94)	(4.62)	(5.31)	(5.44)	(5.13)	(4.83)	(4.98)	(5.59)	(5.84)	(5.33)
Full Load Amps at 115V	4.5	4.5	4.5	4.5	5.8	6	7.2	8.2	8.2	8.2	8.2	11.2	13.2	13.2
<b>MOTOR DATA : Motor HP</b>														
	1/30	1/30	1/30	1/30	1/20	1/10	1/4	1/3	1/3	1/3	1/3	1/4	1/3	1/3
Motor (kW)	(0.025)	(0.025)	(0.025)	(0.025)	(0.037)	(0.075)	(0.186)	(0.249)	(0.249)	(0.249)	(0.249)	(0.186)	(0.249)	(0.249)
Motor Type	SP	SP	SP	SP	SP	SP	PSC	PSC	PSC	PSC	PSC	PSC	PSC	PSC
R.P.M.	1,050	1,050	1,050	1,050	1,050	1,050	1,140	1,140	1,140	1,140	1,140	1,140	1,140	1,140
Amps @ 115V	1.3	1.3	1.3	1.3	2.6	2.8	4.0	4.5	4.5	4.5	4.5	8.0	9.0	9.0
<b>DIMENSIONAL DATA in. (mm)</b>														
"A" Height to Top of Unit	25-3/4 (654)	25-3/4 (654)	25-3/4 (654)	25-3/4 (654)	31-1/4 (794)	31-1/4 (794)	36-1/4 (921)	36-1/4 (921)	36-1/4 (921)	36-1/4 (921)	36-1/4 (921)	36-1/4 (921)	36-1/4 (921)	36-1/4 (921)
"B" Width of Unit	14 (356)	14 (356)	17-1/2 (444)	17-1/2 (444)	17-7/8 (454)	20-5/8 (524)	20-5/8 (524)	23-3/8 (594)	26-1/8 (664)	28-7/8 (733)	31-5/8 (803)	37-1/8 (943)	42-5/8 (1083)	48-1/8 (1222)
"C" Height to Top of Hanger	27-1/2 (698)	27-1/2 (698)	27-1/2 (698)	27-1/2 (698)	34-1/8 (867)	34-1/8 (867)	39-1/8 (994)	39-1/8 (994)	39-1/8 (994)	39-1/8 (994)	39-1/8 (994)	39-1/8 (994)	39-1/8 (994)	39-1/8 (994)
"D" Depth to Rear of Housing	30-3/8 (772)	30-3/8 (772)	30-3/8 (772)	30-3/8 (772)	37-1/2 (952)	37-1/2 (952)	37-1/2 (952)	37-1/2 (952)	37-1/2 (952)	37-1/2 (952)	37-1/2 (952)	37-1/2 (952)	37-1/2 (952)	37-1/2 (952)
"E" Hanging Distance Width	11 (279)	11 (279)	16-1/2 (419)	16-1/2 (419)	14-1/2 (368)	17-1/4 (438)	17-1/4 (438)	20 (508)	22-3/4 (578)	25-1/2 (648)	28-1/4 (718)	33-3/4 (857)	39-1/4 (997)	44-3/4 (1137)
"F" Discharge Opening Width	10 (254)	10 (254)	15-1/2 (394)	15-1/2 (394)	15-3/8 (391)	18-1/8 (460)	18-1/8 (460)	20-7/8 (530)	23-5/8 (600)	26-3/8 (670)	29-1/8 (740)	34-5/8 (879)	40-1/8 (1019)	45-5/8 (1159)
"G" Depth to Unit Side Jacket (492)	19-3/8 (492)	19-3/8 (492)	19-3/8 (492)	19-3/8 (492)	26-3/4 (679)	26-3/4 (679)	26-3/4 (679)	26-3/4 (679)	26-3/4 (679)	26-3/4 (679)	26-3/4 (679)	26-3/4 (679)	26-3/4 (679)	26-3/4 (679)
"H" Discharge Opening Height	16-1/4 (413)	16-1/4 (413)	16-1/4 (413)	16-1/4 (413)	18 (457)	18 (457)	18 (457)	18 (457)	18 (457)	18 (457)	18 (457)	18 (457)	18 (457)	18 (457)
"J" to Centerline of Flue	4 (102)	4 (102)	5-3/4 (146)	5-3/4 (146)	5-7/8 (149)	7-1/4 (184)	7-1/4 (184)	8-5/8 (219)	10 (254)	11-1/4 (286)	12-3/4 (324)	15-1/2 (394)	18-1/4 (464)	21 (533)
"K" Depth to Centerline of Flue	23-5/8 (600)	23-5/8 (600)	23-5/8 (600)	23-5/8 (600)	30-5/8 (778)	30-5/8 (778)	30-5/8 (778)	30-5/8 (778)	30-5/8 (778)	30-5/8 (778)	30-5/8 (778)	30-5/8 (778)	30-5/8 (778)	30-5/8 (778)
"L" Hanger Location	13-3/4 (349)	13-3/4 (349)	13-1/2 (343)	13-1/2 (343)	16-1/4 (413)	16-3/4 (425)	16-3/4 (416)	16-3/8 (416)	16-3/8 (416)	16-3/4 (425)	16-3/4 (425)	16-3/4 (425)	16-3/4 (425)	16-3/4 (425)
Flue Size Dia.-in.* (Dia.-mm)	4 (102)	4 (102)	4 (102)	4 (102)	4 (102)	4 (102)	4 (102)	4 (102)	5 (127)	5 (127)	5 (127)	6 (152)	6 (152)	6 (152)
Fan Diameter-in.	12	12	14	14	14	16	16	18	18	18	18	(2) 16	(2) 18	(2) 18
Gas Inlet-Natural Gas-in.	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2	3/4	3/4	3/4	3/4
Gas Inlet-LP Gas-in.	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2			← 1/2 OR 3/4 →		
Approx. Shipping Wt lb. (kg)	79 (36)	94 (43)	109 (49)	119 (54)	174 (79)	197 (89)	219 (99)	238 (108)	249 (113)	275 (125)	305 (138)	350 (159)	414 (188)	461 (209)

‡ Ratings shown are for unit installations at elevations between 0 and 2,000 ft. For unit installations in U.S.A. above 2,000 ft. (610m), the unit input must be derated 4% for each 1,000 ft. (305m) above sea level; refer to local codes, or in absence of local codes, refer to the latest edition of the National Fuel Gas Code, ANSI Standard Z223.1 (N.F.P.A. No. 54).

For installations in Canada, any reference to deration at altitudes in excess of 2,000 ft. (610m) are to be ignored. At altitudes of 2,000 ft. to 4,500 ft. (610 to 1372m), the unit must be derated to 90% of the normal altitude rating, and be so marked in accordance with the CSA certification.

LEGEND: SP = SHADED POLE  
PSC = PERMANENT SPLIT CAPACITOR

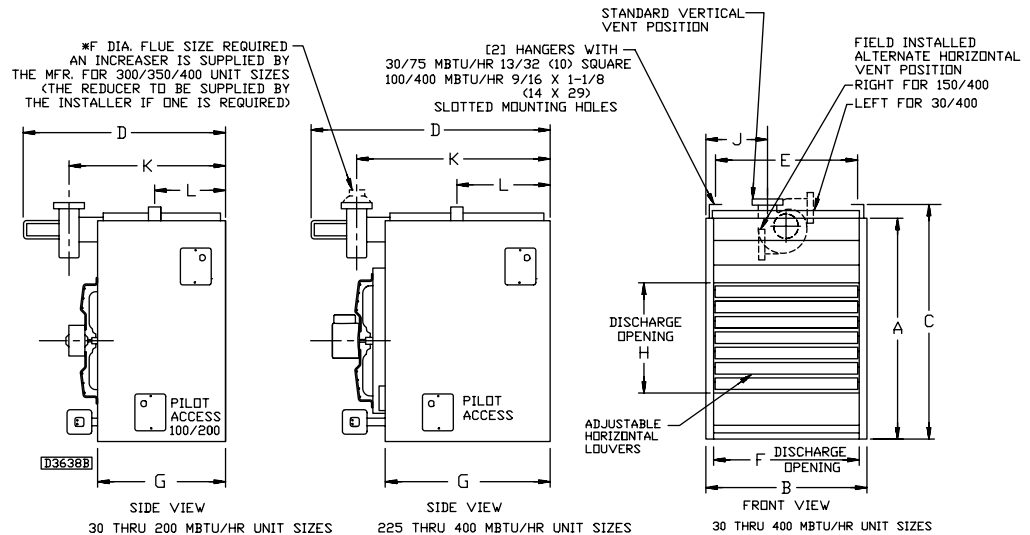

**Figure 1A**

DIMENSIONS .XXX STANDARD UNITS  
DIMENSIONS IN PARENTHESIS (XXX) MILLIMETERS

# INSTALLATION


**▲ WARNING** Do not install unit heaters in corrosive or flammable atmospheres! Premature failure of, or severe damage to the unit will result!

**▲ WARNING** Avoid locations where extreme drafts can affect burner operation. Unit heaters must not be installed in locations where air for combustion would contain chlorinated, halogenated or acidic vapors. If located in such an environment, premature failure of the unit will occur!

Since the unit is equipped with an automatic gas ignition system, the unit heater must be installed such that the gas ignition control system is not directly exposed to water spray, rain or dripping water.

**NOTICE:** Location of unit heaters is related directly to the selection of sizes (refer to Figure 2). Basic rules are as follows:

Figure 2 - Heater Location

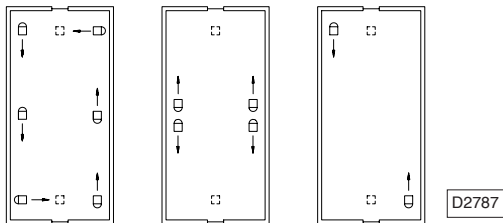

**MOUNTING HEIGHT:** Unit Heaters must be installed at a minimum of 8 feet (2.4m) above the floor, measured to the bottom of the unit. At heights above 8 feet (2.4m), less efficient air distribution will result. Occasionally unit heaters must be mounted at heights of 12 to 16 feet (3.7 to 4.9m) in order to clear obstacles. When this is the case, it is advisable to use centrifugal blower unit heaters.

**AIRCRAFT HANGARS:** Unit Heaters must be installed in aircraft hangars and public garages as follows: In aircraft hangars, unit heaters must be at least 10 feet (3.1m) above the upper surface of wings or engine enclosures of the highest aircraft to be stored in the hangar and 8

feet (2.4m) above the floor in shops, offices and other sections of the hangar where aircraft are not stored or housed. Refer to current ANSI/NFPA No. 409, Aircraft Hangars. In Canada, installation is suitable in aircraft hangars when acceptable to the enforcing authorities

**PUBLIC GARAGES:** In repair garages, unit heaters must be at least 8 feet (2.4m) above the floor. Refer to the latest edition of NFPA No. 88B, Repair Garages.

In parking structures, unit heaters must be installed so that the burner flames are located a minimum of 18 inches (457mm) above the floor or protected by a partition not less than 18 inches (457mm) high. However, any unit heater mounted in a parking structure less than 8 ft. (2.4m) above the floor must be equipped with an OSHA approved fan guard. Refer to the latest edition of NFPA 88A, Parking Structures.

In Canada, installation must be in accordance with the latest edition of CGA-B149 "Installation Codes for Gas Burning Appliances and Equipment."

**AIR DISTRIBUTION:** Direct air towards areas of maximum heat loss. When multiple heaters are involved, circulation of air around the perimeter is recommended where heated air flows along exposed walls. Satisfactory results can also be obtained where multiple heaters are located toward the center of the area with heated air directed toward the outside walls. Be careful to avoid all obstacles and obstructions which could impede the warm air distribution patterns. Heat throw distances are presented in Table 2, and Figure 2A.

Figure 2A - Heat Throw Distances

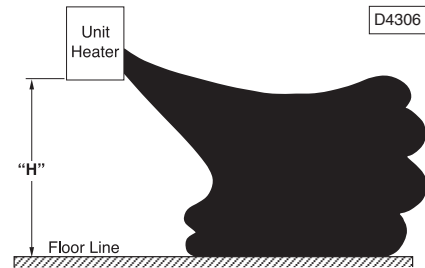


Table 2 - Standard Applications - Heat Throw Distances (Approximate) (see Figure 2A)

"H" ft. (m)	UNIT SIZE BTU/Hr (kW)													
	30,000 (8.8)	45,000 (13.2)	60,000 (17.6)	75,000 (22.0)	100,000 (29.3)	125,000 (36.6)	150,000 (43.9)	175,000 (51.2)	200,000 (58.6)	225,000 (65.9)	250,000 (73.2)	300,000 (87.8)	350,000 (102.5)	400,000 (117.1)
8 (2.4)	33 (10.1)	33 (10.1)	33 (10.1)	40 (12.2)	60 (18.3)	65 (19.8)	70 (21.3)	75 (22.9)	80 (24.4)	85 (25.9)	90 (27.4)	105 (32.0)	110 (33.5)	120 (36.6)
10 (3.0)	28 (8.5)	28 (8.5)	28 (8.5)	35 (10.7)	54 (16.5)	56 (17.1)	60 (18.3)	64 (19.5)	68 (20.7)	72 (21.9)	78 (23.8)	90 (27.4)	95 (29.0)	100 (30.5)
12 (3.7)	NR	NR	NR	NR	44 (13.4)	46 (14.0)	49 (20.7)	57 (17.4)	61 (18.6)	65 (19.8)	68 (20.7)	80 (24.4)	84 (25.6)	90 (27.4)
15 (4.6)	NR	NR	NR	NR	NR	NR	45 (22.6)	49 (14.9)	52 (15.8)	56 (17.1)	60 (18.3)	70 (21.3)	74 (22.6)	80 (24.4)
20 (6.1)	NR	NR	NR	NR	NR	NR	NR	NR	46 (14.0)	50 (15.2)	54 (16.5)	63 (19.2)	66 (20.1)	70 (21.3)

NR = Not recommended

H = Distance from floor to bottom of the unit.

## INSTALLATION (continued)

Unit heaters should not be installed to maintain low temperatures and/or freeze protection of buildings. A minimum of 50°F (10°C) thermostat setting must be maintained. If unit heaters are operated to maintain lower than 50°F (10°C), hot flue gases are cooled inside the heat exchanger to a point where water vapor (a flue gas by-product) condenses onto the heat exchanger walls. The result is a mildly corrosive acid that prematurely corrodes the aluminized heat exchanger and can actually drip water down from the unit heater onto floor surface. Additional unit heaters should be installed if a minimum 50°F (10°C) thermostat setting cannot be maintained.

**AIR FOR COMBUSTION:**The Unit Heater shall be installed in a location in which the facilities for ventilation permit satisfactory combustion of gas, proper venting, and the maintenance of ambient temperature at safe limits under normal conditions of use. The Unit Heater shall be located in such a manner as not to interfere with proper circulation of air within the confined space. When buildings are so tight that normal infiltration does not meet air requirements, outside air shall be introduced per Sections 1.3.4.2 and 1.3.4.3 of ANSI Z223.1 for combustion requirements. A permanent opening or openings having a total free area of not less than one square inch per 5,000 BTU/HR. (1.5 Kw) of total input rating of all appliances within the space shall be provided.

**NOTICE:** Unit heater sizing should be based on heat loss calculations where the unit heater output equals or exceeds heat loss. Heater output is approximately 80% of input BTU/HR. rating.

**CLEARANCES:** Each Gas Unit Heater shall be located with respect to building construction and other equipment so as to permit access to the Unit Heater. Clearance between walls and the vertical sides of the Unit Heater shall be no less than 18 inches (457mm). A minimum clearance of 6 inches (152mm) must be maintained between the top of the Unit Heater and the ceiling. The bottom of the Unit Heater must be no less than 12 inches (305 mm) from any combustible. However, in order to ensure access to the burner compartment, a minimum distance of 21 inches (533 mm) is required. The distance between the flue collector and any combustible must be no less than 6 inches (152mm). Also see AIR FOR COMBUSTION and VENTING sections.

**NOTICE:** Increasing the clearance distances may be necessary if there is a possibility of distortion or discoloration of adjacent materials.

**▲ WARNING** Make certain that the lifting methods used to lift the heater and the method of suspension used in the field installation of the heater are capable of uniformly supporting the weight of the heater at all times. Failure to heed this warning may result in property damage or personal injury!


**▲ WARNING** Make certain that the structure to which the heater is mounted is capable of supporting its weight. Under no circumstances must the gas lines, the venting system or the electrical conduit be used to support the heater; or should any other objects (i.e. ladder, person) lean against the heater, gas lines, venting system or the electrical conduit for support.

**▲ CAUTION** Unit heaters must be hung level from side to side and from front to back, see Figures 1 through 4. Failure to do so will result in poor performance and or premature failure of the unit.

**▲ WARNING** Insure that all hardware used in the suspension of each unit heater is more than adequate for the job. Failure to do so may result in extensive property damage, severe personal injury or death.


Refer to Figures 1 through 4, and dimensional data per Table 1 for suspension of units.

Figure 3A - Heater Mounting\*

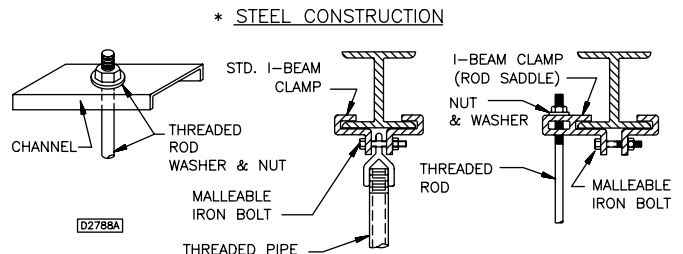

\*All hanging hardware and wood is not included with the unit (To be field supplied).

Figure 3B - Heater Mounting 30/400 MBTU Unit Sizes

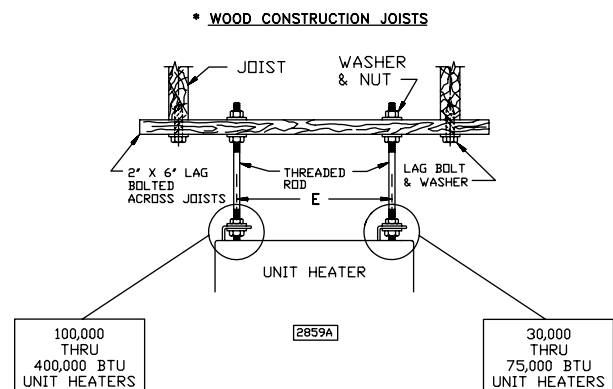

# GAS SUPPLY PIPING

**▲ WARNING** To avoid equipment damage or possible personal injury, do not connect gas piping to this unit until a supply line pressure/leak test has been completed. Connecting the unit before completing the pressure/leak test may damage the unit gas valve and result in a fire hazard.

**▲ WARNING** Do not rely on a shut off valve to isolate the unit while conducting gas pressure/leak tests. These valves may not be completely shut off, exposing the unit gas valve to excessive pressure and damage.

## PIPE SIZING

To provide adequate gas pressure at the gas unit heater, size the gas piping as follows:

1. Find the cu ft/hr by using the following formula:

$$\text{Cu ft/hr} = \frac{\text{Input}}{\text{Btu per Cu ft}}$$

2. Refer to Table 3. Match "Pipe Run in Feet" with appropriate "Gas Input - Cu Ft/Hr" figure. This figure can then be matched to the pipe size at the end of the column.

Example: It is determined that a 67 foot (20.4m) run of gas pipe is required to connect a 200 MBTU gas unit heater to a 1,000 Btu/cu. ft (0.29 kW) natural gas supply.

$$\frac{200,000 \text{ Btu/hr}}{1,000 \text{ Btu/cu ft}} = 200 \text{ Cu ft/hr}$$

Using Table 3, a 1 inch pipe is needed.

**NOTICE: See General Safety Information section for English/SI (metric) unit conversion factors.**

**NOTICE: If more than one gas unit heater is to be served by the same piping arrangement, the total cubic feet per hour input and length of pipe must be considered.**

**NOTICE: If the gas unit heater is to be fired with LP gas, see Table 3 or consult the local LP gas dealer for pipe size information.**

**NOTICE: HEATER INSTALLATION FOR USE WITH PROPANE (BOTTLED) GAS MUST BE MADE BY A QUALIFIED L.P. GAS DEALER OR INSTALLER. HE WILL ENSURE THAT PROPER JOINT COMPOUNDS ARE USED FOR MAKING PIPE CONNECTIONS; THAT AIR IS PURGED FROM LINES; THAT A THOROUGH TEST IS MADE FOR LEAKS BEFORE OPERATING HEATER; AND THAT IT IS PROPERLY CONNECTED TO PROPANE GAS SUPPLY SYSTEM.**

Before any connection is made to an existing line supplying other gas appliances, contact the local gas company to make certain that the existing line is of adequate size to handle the combined load.

**Table 3 - Gas Pipe Size**

Maximum Capacity of Pipe in Cubic Feet of Gas per Hour (Cubic Meters per Hour) for Gas Pressures of 0.5 psig (3.5 kPa) or Less, and a Pressure Drop of 0.5 Inch Water Column (124.4 Pa)  
(Based on a 0.60 Specific Gravity Gas)

Nominal Iron Pipe Size	Internal Dia. in.	Length of Pipe, Feet (meters)													
		10 (3.0)	20 (6.1)	30 (9.1)	40 (12.2)	50 (15.2)	60 (18.3)	70 (21.3)	80 (24.4)	90 (27.4)	100 (30.5)	125 (38.1)	150 (45.7)	175 (53.3)	200 (61.0)
1/2	0.622	175 (4.96)	120 (3.40)	97 (2.75)	82 (2.32)	73 (2.07)	66 (1.87)	61 (1.73)	57 (1.61)	53 (1.50)	50 (1.42)	44 (1.25)	40 (1.13)	37 (1.05)	35 (0.99)
3/4	0.824	360 (10.2)	250 (7.08)	200 (5.66)	170 (4.81)	151 (4.28)	138 (3.91)	125 (3.54)	118 (3.34)	110 (3.11)	103 (2.92)	93 (2.63)	84 (2.38)	77 (2.18)	72 (2.04)
1	1.049	680 (19.3)	465 (13.2)	375 (10.6)	320 (9.06)	285 (8.07)	260 (7.36)	240 (6.80)	220 (6.23)	205 (5.80)	195 (5.52)	175 (4.96)	160 (4.53)	145 (4.11)	135 (3.82)
1 1/4	1.380	1400 (39.6)	950 (26.9)	770 (21.8)	660 (18.7)	580 (16.4)	530 (15.0)	490 (13.9)	460 (13.0)	430 (12.2)	400 (11.3)	360 (10.2)	325 (9.20)	300 (8.50)	280 (7.93)
1 1/2	1.610	2100 (59.5)	1460 (41.3)	1180 (33.4)	990 (28.0)	900 (25.5)	810 (22.9)	750 (21.2)	690 (19.5)	650 (18.4)	620 (17.6)	550 (15.6)	500 (14.2)	460 (13.0)	430 (12.2)
2	2.067	3950 (112)	2750 (77.9)	2200 (62.3)	1900 (53.8)	1680 (47.6)	1520 (43.0)	1400 (39.6)	1300 (36.8)	1220 (34.5)	1150 (32.6)	1020 (28.9)	950 (26.9)	850 (24.1)	800 (22.7)
2 1/2	2.469	6300 (178)	4350 (123)	3520 (99.7)	3000 (85.0)	2650 (75.0)	2400 (68.0)	2250 (63.7)	2050 (58.0)	1950 (55.2)	1850 (52.4)	1650 (46.7)	1500 (42.5)	1370 (38.8)	1280 (36.2)
3	3.068	11000 (311)	7700 (218)	6250 (177)	5300 (150)	4750 (135)	4300 (122)	3900 (110)	3700 (105)	3450 (97.7)	3250 (92.0)	2950 (83.5)	2650 (75.0)	2450 (69.4)	2280 (64.6)
4	4.026	23000 (651)	15800 (447)	12800 (362)	10900 (309)	9700 (275)	8800 (249)	8100 (229)	7500 (212)	7200 (204)	6700 (190)	6000 (170)	5500 (156)	5000 (142)	4600 (130)

1. Determine the required Cu. Ft. / Hr. by dividing the rated heater input by 1000. For SI / Metric measurements: Convert unit Btu. / Hr. to kilowatts. Multiply the units input (kW) by 0.0965 to determine Cubic Meters / Hour. 2. FOR NATURAL GAS: Select the pipe size directly from the table. 3. FOR PROPANE GAS: Multiply the Cu. Ft. / Hr. (Cubic Meters per Hour) value by 0.633; then use the table. 4. Refer to the metric conversion factors listed in General Safety section for more SI unit measurements/conversions.

## PIPE INSTALLATION


1. Install the gas piping in accordance with applicable local codes.
2. Check gas supply pressure. Each unit heater must be connected to a manifold pressure and a gas supply capable of supplying its full rated capacity (refer to Table 4). A field LP tank regulator must be used to limit the supply pressure to maximum of 14 in. W.C. (3.5 kPa). All piping should be sized in accordance with the latest edition of ANSI Standard Z223.1, National Fuel Gas Code; in Canada, according to CGA-B149. See Tables 1 and 3 for correct gas supply piping size. If gas pressure is excessive on natural gas applications, install a pressure regulating valve in the line upstream from the main shutoff valve.
3. Adequately support the piping to prevent strain on the gas manifold and controls.
4. To prevent the mixing of moisture with gas, run the take-off piping from the top, or side, of the main.
5. Standard gas duct furnaces, optional two-stage units, and hydraulic modulating units are supplied with a combination valve which includes:
  - (a) Manual "A" valve
  - (b) Manual "B" valve
  - (c) Solenoid valve
  - (d) Pilot safety
  - (e) Pressure regulator
 Pipe directly in to combination valve (see Figure 4).
6. A 1/8 in. N.P.T. plugged tapping, accessible for test gauge connection, must be installed immediately upstream of the gas supply connection to the appliance.
7. Provide a drip leg in the gas piping near the gas unit heater. A ground joint union and a manual gas shutoff valve should be installed ahead of the unit heater controls to permit servicing. The manual main shutoff valve must be located external to the jacket. See Figure 4.
8. Make certain that all connections have been adequately doped and tightened.

**▲ CAUTION** Do not overtighten the inlet gas piping into the valve. This may cause stresses that would crack the valve!

**NOTICE:** Use pipe joint sealant resistant to the action of liquefied petroleum gases regardless of gas conducted.

**▲ WARNING** Check all pipe joints for leakage using a soap solution or other approved method. Never use an open flame or severe personal injury or death may occur.

**Figure 4 - Pipe Installation, Standard Controls**

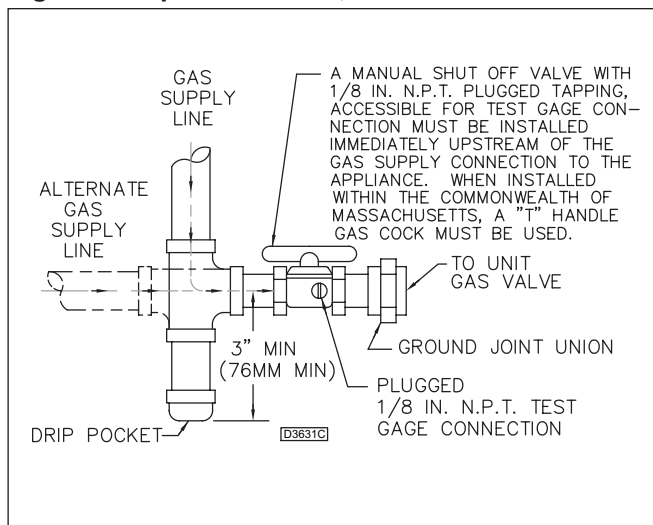

**▲ WARNING** Never use an open flame to detect gas leaks. Explosive conditions may exist which would result in personal injury or death.

The appliance and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psig (3.5 kPa).

The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psig (3.5 kPa).

**Table 4 - Gas Piping Requirements**

SINGLE STAGE GAS PIPING REQUIREMENTS*		
GasType	Natural Gas	Propane (LP) Gas
<b>Manifold Pressure</b>	3.5 in. W.C. (0.9 kPa)	10.0 in. W.C. (2.5 kPa)
<b>Supply Inlet Pressure</b>	14.0 in. W.C. Max. (3.5 kPa)	14.0 in. W.C. Max. (3.5 kPa)
	5.0 in. W.C. Min. (1.2 kPa)	11.0 in. W.C. Min. (2.7 kPa)

\*For single stage application only at normal altitudes.

TWO STAGE GAS PIPING REQUIREMENTS**		
Gas Type	Natural Gas	Propane (LP) Gas
<b>Supply Inlet Pressure</b>	6.5 in. W.C. Min. (1.6 kPa)	11.5 in. W.C. Min. (2.9 kPa)

\*\*For two stage applications only at normal altitudes; two stage applications do not apply to the 30/75 MBH models.



# ELECTRICAL CONNECTIONS



**▲ WARNING**  
**HAZARDOUS VOLTAGE!**  
**disconnect ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS BEFORE SERVICING. Failure to disconnect power before servicing can cause severe personal injury or death.**

Standard units are shipped for use on 115 volt, 60 hertz single phase electric power. The motor nameplate and electrical rating on the transformer should be checked before energizing the unit heater electrical system. All external wiring must conform to the latest edition of the ANSI/NFPA No. 70, National Electrical Code and applicable current local codes; in Canada, to the Canadian Electrical Code, Part 1 CSA Standard C22.1.

**▲ CAUTION** Do not use any tools (i.e. screwdriver, pliers, etc.) across the terminals to check for power. Use a voltmeter.

It is recommended that the electrical power supply to each unit heater be provided by a separate, fused and permanently live electrical circuit. A disconnect switch of suitable electrical rating for each unit heater should be located as close to the gas valve and controls as possible. Each unit heater must be electrically grounded in accordance with the latest edition of the National Electric Code, ANSI/NFPA No. 70 or CSA Standard C22.1. Sample wiring connections are depicted in Figures 6 & 7.

The transformer supplied with this unit heater is internally fused. Any overload or short circuit will ruin the transformer.

## THERMOSTAT WIRING AND LOCATION


**NOTICE: The thermostat must be mounted on a vertical vibration-free surface free from air currents and in accordance with the furnished instructions.**

Mount the thermostat approximately 5 feet (1.5 m) above the floor in an area where it will be exposed to a free circulation of average temperature air. Always refer to the thermostat instructions as well as our unit wiring diagram and wire accordingly. Avoid mounting the thermostat in the following locations:

1. Cold areas - Outside walls or areas where drafts may affect the operation of the control.
2. Hot areas - Areas where the sun's rays, radiation, or warm air currents may affect control operation.
3. Dead areas - Areas where air cannot circulate freely, such as behind doors or in corners.

\* Thermostat wires tagged "W" and "G" must be connected together except when using a general purpose "SPDT" 24VAC relay and a standard thermostat with subbase, or when using Honeywell T834H-1009 or T834H-1017 thermostats. Also refer to Figure 5 for other wiring connections.

Figure 5 - C1267G

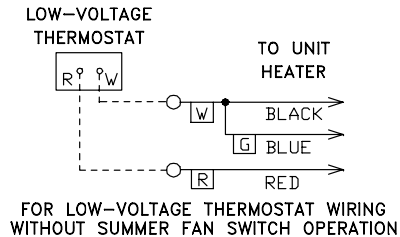

## THERMOSTAT HEAT ANTICIPATOR ADJUSTMENTS:

The initial heat anticipator setpoint should equal the thermostat's current amperage draw when the unit is firing. This setpoint should be measured for the best results. Use the recommended ranges as a guide. If further information is needed, consult your thermostat manufacturer's instructions.

### Recommended Heat Anticipator Setting Ranges:

Gas Ignition Type	25 ft. (7.6m) T'stat Wiring	50 ft. (15.2m) T'stat Wiring
For Power Vented Units: Intermittent (Spark)	0.85 to 0.90 A	0.90 to 1.1 A Max. Setting on T'stat

## FAN TIME DELAY CONTROL

Leads from time delay controls are factory wired to the junction box. The fan control is a time delay relay (approximately 45 seconds ON, 65 seconds OFF). The fan control is rated at 17 amps.

**NOTICE: The start-up fan delay must not exceed 90 seconds from a cold start.**

**NOTICE: For all wiring connections, refer to the wiring diagram that your unit is equipped with (either affixed to the side jacket or enclosed in your unit's installation instruction envelope). Should any original wire supplied with the heater have to be replaced, it must be replaced with wiring material having a temperature rating of at least 105° C.**

**Should any high limit switch wires have to be replaced, they must be replaced with wiring material having a temperature rating of 200°C minimum.**

# VENTING FOR POWER VENTED (CATEGORY III) UNIT HEATERS

**All unit heaters must be vented!** All venting installations shall be in accordance with the latest edition of Part 7, venting of Equipment of the National Fuel Gas Code, ANSI Z223.1, or applicable provisions of local building codes for natural or power vented units.

Power vented units are designed to be used with single wall vent pipe utilizing horizontal or vertical venting arrangements (see Figures 6, 7 and 8). These arrangements may **terminate external** to the building using either a single wall or double wall (Type B) vent. See Figures 6 thru 10 for special installation requirements regarding these venting conditions.

**▲ WARNING CARBON MONOXIDE!**

**Your venting system must not be blocked by any snow, snow drifts, or any foreign matter. Inspect your venting system to ensure adequate ventilation exists at all times! Failure to heed these warnings could result in Carbon Monoxide Poisoning (symptoms include grogginess, lethargy, inappropriate tiredness, or flu-like symptoms).**

**▲ WARNING Do not use a type B (double wall) vent internally within the building on our power vented units!**

If double wall venting is used, components which are UL Listed and approved for Category III positive pressure venting systems **MUST** be used.

A Briedart Type L, Field Starkap or an equivalent vent cap must be supplied by the customer for each power vented unit. The vent pipe diameter **MUST** be as specified in Table 1 ("D" Dia. Flue Opening). A reducer must be field installed for 100 through 175 MBH Unit Sizes (Canadian units include this required reducer). All 300 through 400 MBH Unit sizes are factory equipped with the required flue increaser. Refer to Figures 9 through 10D for additional requirements.


The venting system for these appliances shall terminate at least four feet (1.2m) below, four feet (1.2m) horizontal from, or one foot (0.3m) above any door, window, or gravity air inlet into any building.

Through the wall vents for these appliances shall **NOT** terminate over public walkways, or over an area where condensate or vapor could create a nuisance or hazard or could be detrimental to the operation of regulators, relief valves, or other equipment.


The vent pipe equivalent length must be 5 ft. (1.5m) minimum and must not exceed 50 ft. (15.2m). Equivalent length is the total length of straight sections PLUS 15 ft. (4.6m) for each 90 degree elbow, 8 ft. (2.4m) for each 45 degree elbow, and 10 ft. (3.0m) for the vent cap.

Maintain 6 in. (152mm) between vent pipe and combustible materials. A minimum of 12 in. (305mm) of straight pipe is required from the venter outlet before installing an elbow in the vent system. **An elbow should never be attached directly to the venter!**


**Figure 6 - Horizontal Left Vent Position (Rear View of Unit Heater)**

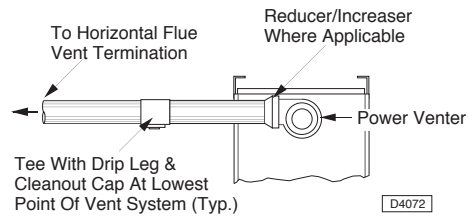

**Figure 7 - Horizontal Right Vent Position (Rear View of Unit Heater)**

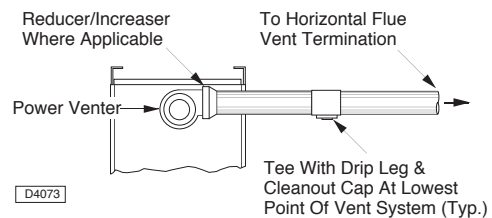

**Figure 8 - Vertical Vent Position (Side View of Unit Heater)**

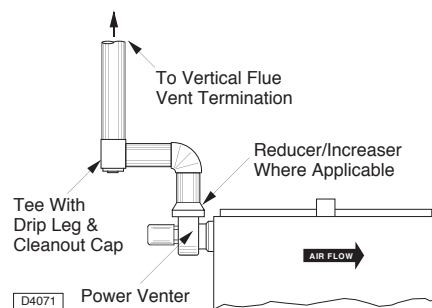

Vent Systems - Termination Clearance Requirements*	
Structure	Minimum Clearances for Termination Locations
Door, window or any gravity air inlet	4 feet below
	4 feet horizontally
	1 foot above
Forced air inlet within 10 ft.	3 feet above
Adjoining building or parapet	6 feet
Adjacent public walkways	7 feet above grade

\* If the vent terminal is to be installed near ground level, the vent terminal must be positioned at least twelve inches above the maximum anticipated snow depth (see page 11 for Canadian requirements).

## VENTING (continued)

Use single wall pipe constructed of 26 gauge galvanized steel or material of equivalent durability and corrosion resistance for the vent system. For installation in Canada, use pipe constructed from 0.025 inch thick aluminum or 0.018 inch thick stainless steel.

**▲ WARNING** Never use a pipe of a diameter other than that specified in Table 1! Never use PVC or other nonmetallic pipe for venting! To do so may result in serious damage to the unit or severe personal injury or death!

Any run of single wall vent pipe passing through an unheated space must be insulated with an insulation suitable to 550°F.

The vent terminal must be installed with a minimum clearance of four feet (1.2m) from electric meters, gas meters, regulators and relief equipment.

Seal ALL vent pipe joints and seams to prevent leakage. Use General Electric RTV-108 or DowCorning RTV-732 silicone sealant (or equivalent); or 3M #425 aluminum foil tape (or equivalent).

The vent system must be installed to prevent collection of condensate. Vertical vent pipes should be equipped with condensate drains. Pitch horizontal pipes downward 1/4 in. per foot (21mm per meter) toward outlet for condensate drainage.

Horizontal portions of the venting system shall be supported at maximum intervals of four feet (1.2m) to prevent sagging (in Canada, support at 3 feet (1m) minimum intervals).

Insulate single wall vent pipe exposed to cold air or running through unheated areas.


**Each unit must have an individual vent pipe and vent terminal per furnace section!** Each unit MUST NOT be connected to other vent systems or to a chimney.

Horizontal Venting: Units are shipped from the factory set up for vertical venting. To convert the power venter for horizontal venting, remove the shipping support bracket; refer to Figures 6 through 10 and 17, and follow this procedure:

1. Hold power venter motor in position.
2. Remove the three Phillips-head screws from the motor adaptor plate.
3. Remove the three screws which connect the power venter stack to the power venter housing.
4. Rotate the power venter housing to the horizontal position.
5. Replace screws accordingly.

**NOTICE: The motor, pressure switch, and junction box bracket MUST remain located as shipped from the factory. Rotate only the blower housing! If the power venter housing is to be moved to the right horizontal position, the junction box must be rotated 90 degrees CCW to clear the connection. To do this, remove all wires, conduit and conduit connector from the junction box, noting location of wires. Move box, using holes provided. Move 7/8" plug from bottom of box to side. Reconnect all wires according to the unit's wiring diagram.**

**Figure 9**  
**Adaptor**  
**Installation**

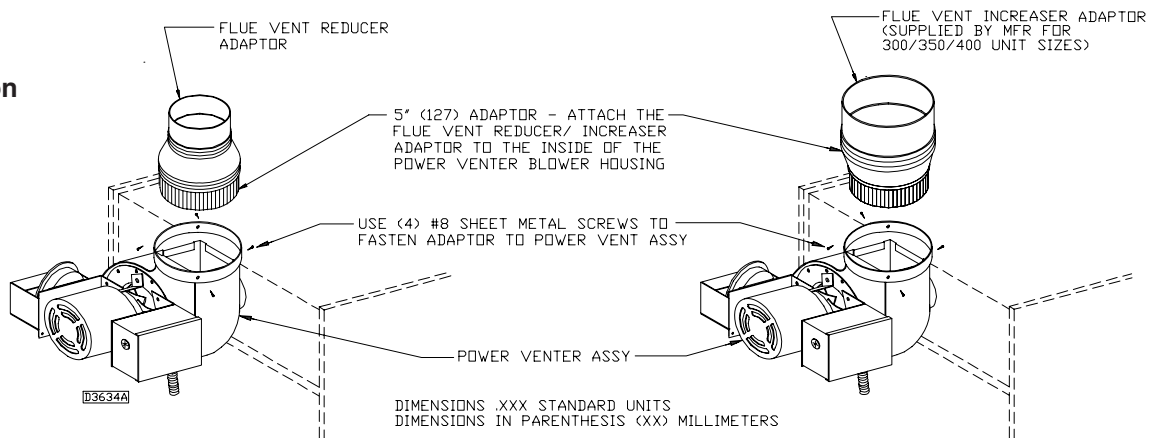

REFER TO SPECIFICATION TABLE AND INSTALLATION MANUAL FOR PROPER USAGE

The following instructions apply to Canadian installations in addition to installation and operating instructions:

1. Installation must conform with local building codes, or in absence of local codes, with current CGA-B149.1 Installation Codes for Natural Gas Burning Appliances and Equipment, or CGA-B149.2, Installation Codes for Propane Gas Burning Appliances and Equipment.
2. Any references to U.S. standards or codes in these instructions are to be ignored and the applicable Canadian standards or codes applied.
3. The reducer must be field supplied for 100, 125, 150 and 175 MBH unit sizes.
4. If using a metal vent system under positive gauge pressure in Canada, a slip fit vent connection must be secured by at least two corrosion-resistant screws, or other mechanical locking means.
5. The vent shall not terminate - (a) Less than 6 ft. (1.8m) from a combustion air inlet of another appliance. (b) Less than 3 ft. (1m) from any other building opening or any gas service regulator. (c) Directly above a gas utility meter or service regulator.

# VENTING (continued)

Figure 10A

## HORIZONTAL ARRANGEMENT SINGLE WALL VENT SYSTEM TO SINGLE WALL TERMINATION


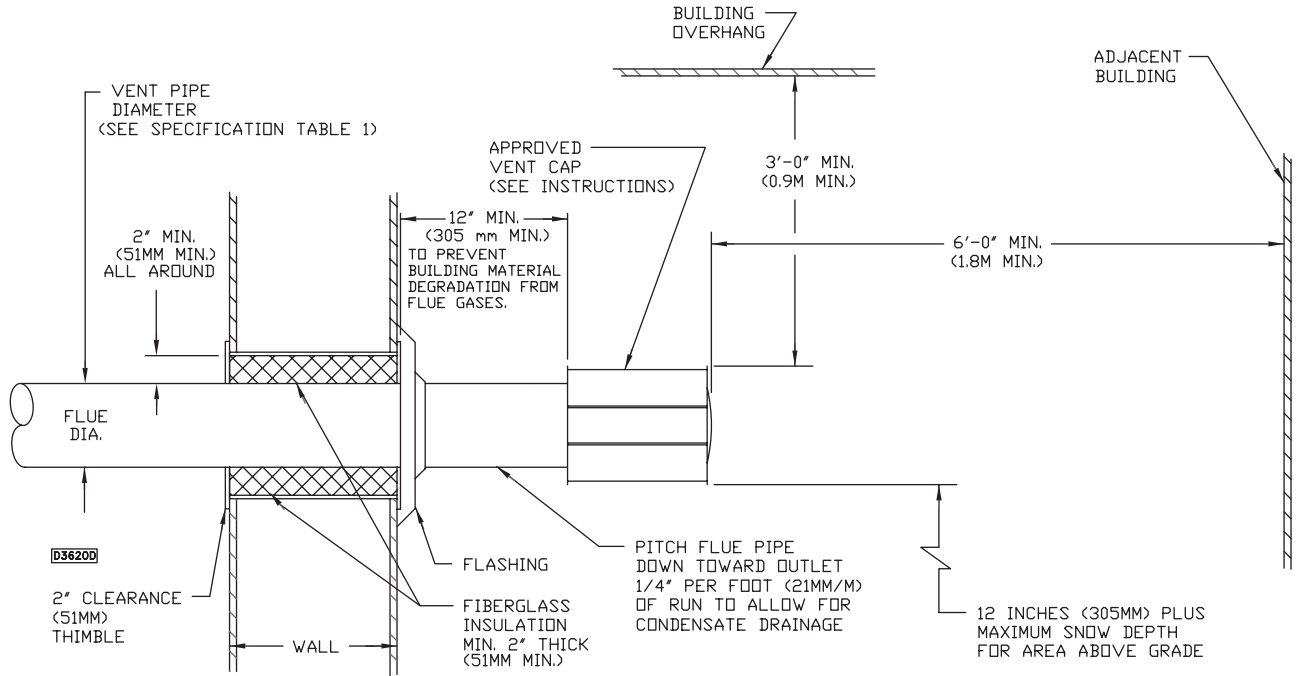


Figure 10B

## VERTICAL ARRANGEMENT SINGLE WALL VENT SYSTEM TO SINGLE WALL TERMINATION

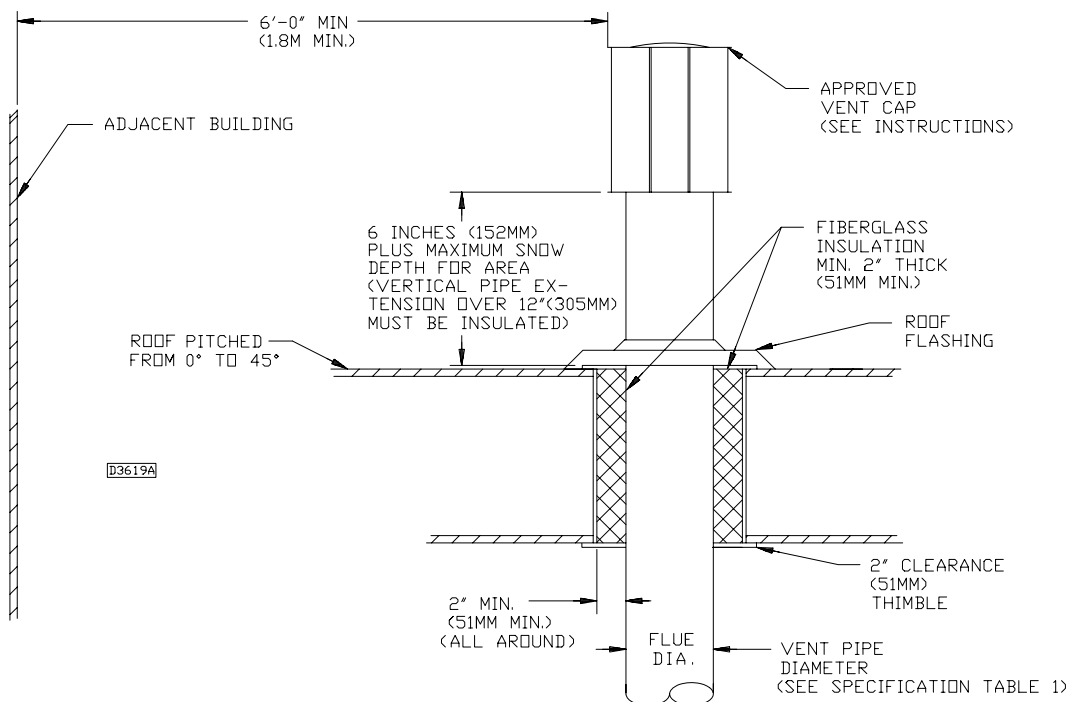

# VENTING (continued)

Figure 10C

## HORIZONTAL ARRANGEMENT SINGLE WALL VENT SYSTEM TO DOUBLE WALL TERMINATION


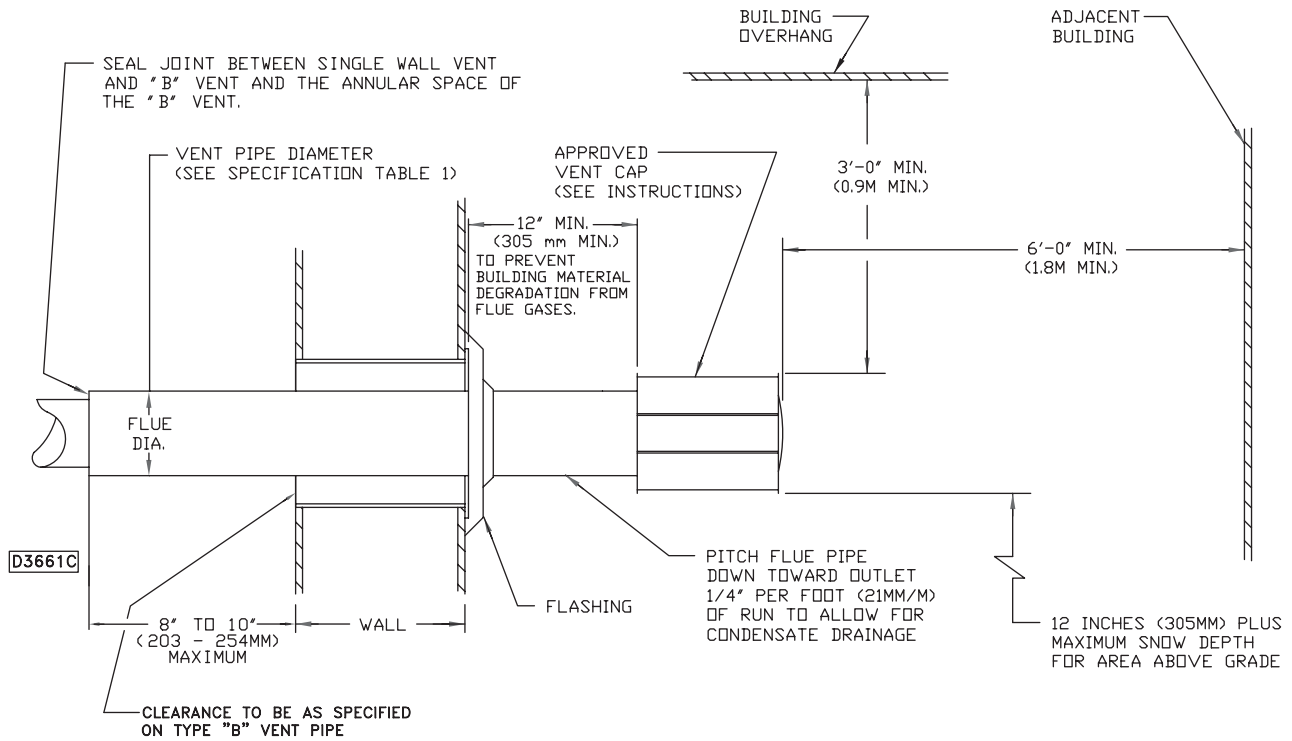


Figure 10D

## VERTICAL ARRANGEMENT SINGLE WALL VENT SYSTEM TO DOUBLE WALL WALL TERMINATION

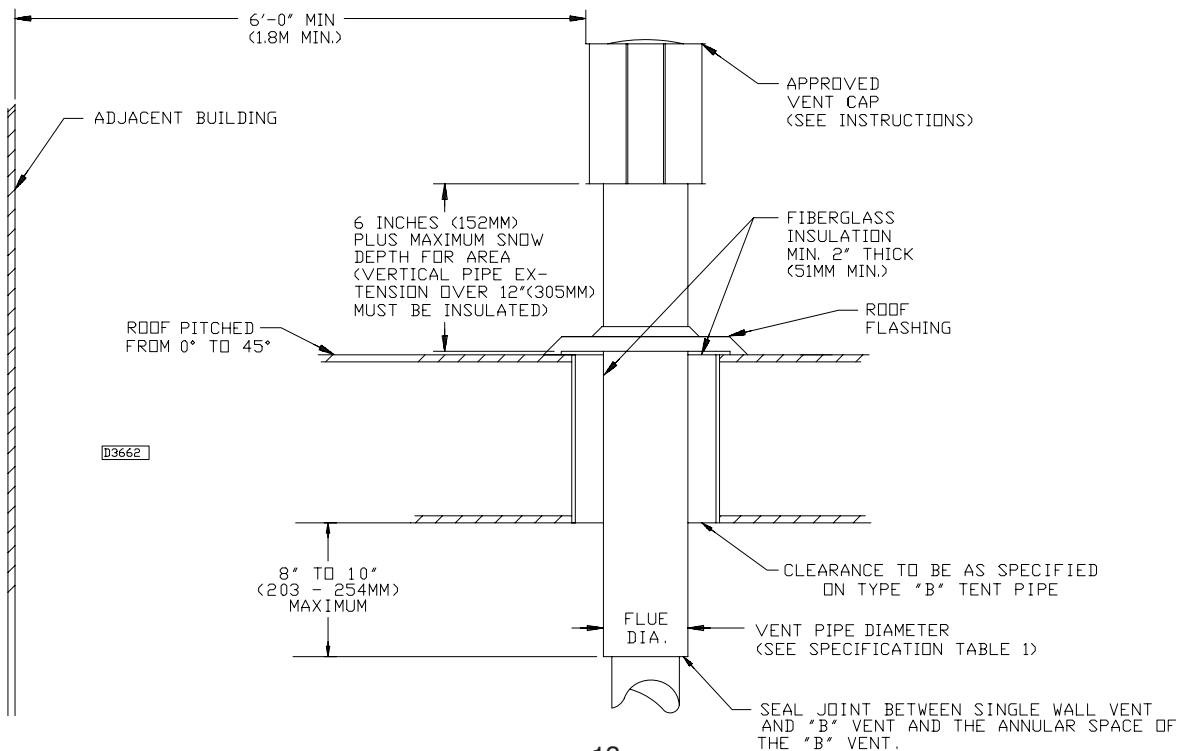

# OPERATION

## POWER VENTED PROPELLER UNITS INTERMITTENT (SPARK) PILOT IGNITION

### EXPLANATION OF CONTROLS (See Figure 11):

1. The unit heater is equipped with a power venter system consisting of a power venter motor and blower, pressure switch, and sealed flue collector in place of the conventional draft diverter.

**▲ CAUTION** The addition of external draft hoods or power ventors is not permitted. Addition of such devices may cause severe unit malfunction or failure!

2. **▲ CAUTION** The power venter motor is energized by the room thermostat on a call for heat. The pressure switch measures the flow through the vent system and energizes the indirect spark ignition system when the flow is correct.

**▲ WARNING** The pressure switch **MUST NOT be bypassed. The unit MUST NOT be fired unless the power venter is operating. An unsafe condition could result.**

3. The indirect spark ignition system consists of an ignition control module, a dual combination valve, and a spark-ignited pilot burner. When the pressure switch closes, the pilot valves opens and a spark is generated to light the pilot burner. When flame sensing circuit senses that the pilot flame is established, the main gas valve is opened to supply gas to the main burners. When the thermostat is satisfied, the vent system is deenergized and both valves are closed to stop all flow of gas to the unit.
4. The limit switch interrupts the flow of electric current to the main gas valve in case the heater becomes overheated.
5. The fan switch delays the operation of the fan until the heater is warmed, then keeps the fan running after the gas has been turned off until the useful heat has been removed. **The startup fan delay must not exceed 90 seconds from a cold start.**
6. The wall thermostat (supplied optionally) is a temperature sensitive switch which operates the vent system and the ignition system to control the temperature of the space being heated. It must be mounted on a vibration free, vertical surface away from air currents, in accordance with the instructions furnished with the thermostat (also refer to Electrical Section).

### START-UP (Also refer to lighting instruction plate equipped on the unit)

1. Open the manual valve supplying gas to the unit heater, and with the union connection loose, purge air from the gas line. Tighten the union and check for gas leaks using a soapy water solution only.

**▲ WARNING** Never use an open flame to detect gas leaks. Explosive conditions may exist which could result in personal injury or death.

**▲ WARNING** Before attempting to light or relight pilot, wait 5 minutes to allow gas which may have accumulated in the burner compartment to escape. Failure to do so could cause the accumulated gas to ignite rapidly, leading to personal injury or death.

2. Open the manual valve on the unit heater.
3. Turn ON electrical power.
4. The unit should be under the control of the thermostat. Turn the thermostat to the highest point and determine that the power venter motor starts, and the pilot and main burners ignite. Turn the thermostat to the lowest point and determine that the power venter motor shuts off and the pilot and main burners are extinguished.
5. If pilot adjustment is required, remove the pilot adjustment seal cap and adjust the pilot screw to obtain proper flame. Clockwise rotation decreases pilot flame size. Replace the cap.
6. Turn the thermostat to the desired position.
7. See Gas Input Rate and Adjustments sections.

### SHUT DOWN


1. Turn the valve selector knob to the "OFF" position.
2. Turn off the electricity.
3. To relight, follow the "start-up" instructions.

See Figure 11 for parts/identification.

**Figure 11 - Burner Components — Intermittent Pilot Ignition**  
 Also refer to Figures 1A, 4, 14, 15 & 16 for component locations.

**BURNER DRAWER COMMON PARTS:**


- 1.) Main Burners
- 2.) Burner Manifold
- 3.) Air Shutters
- 4.) Burner Springs
- 5.) Main Burner Orifice
- 6.) Transformer
- 7.) Pilot Tubing

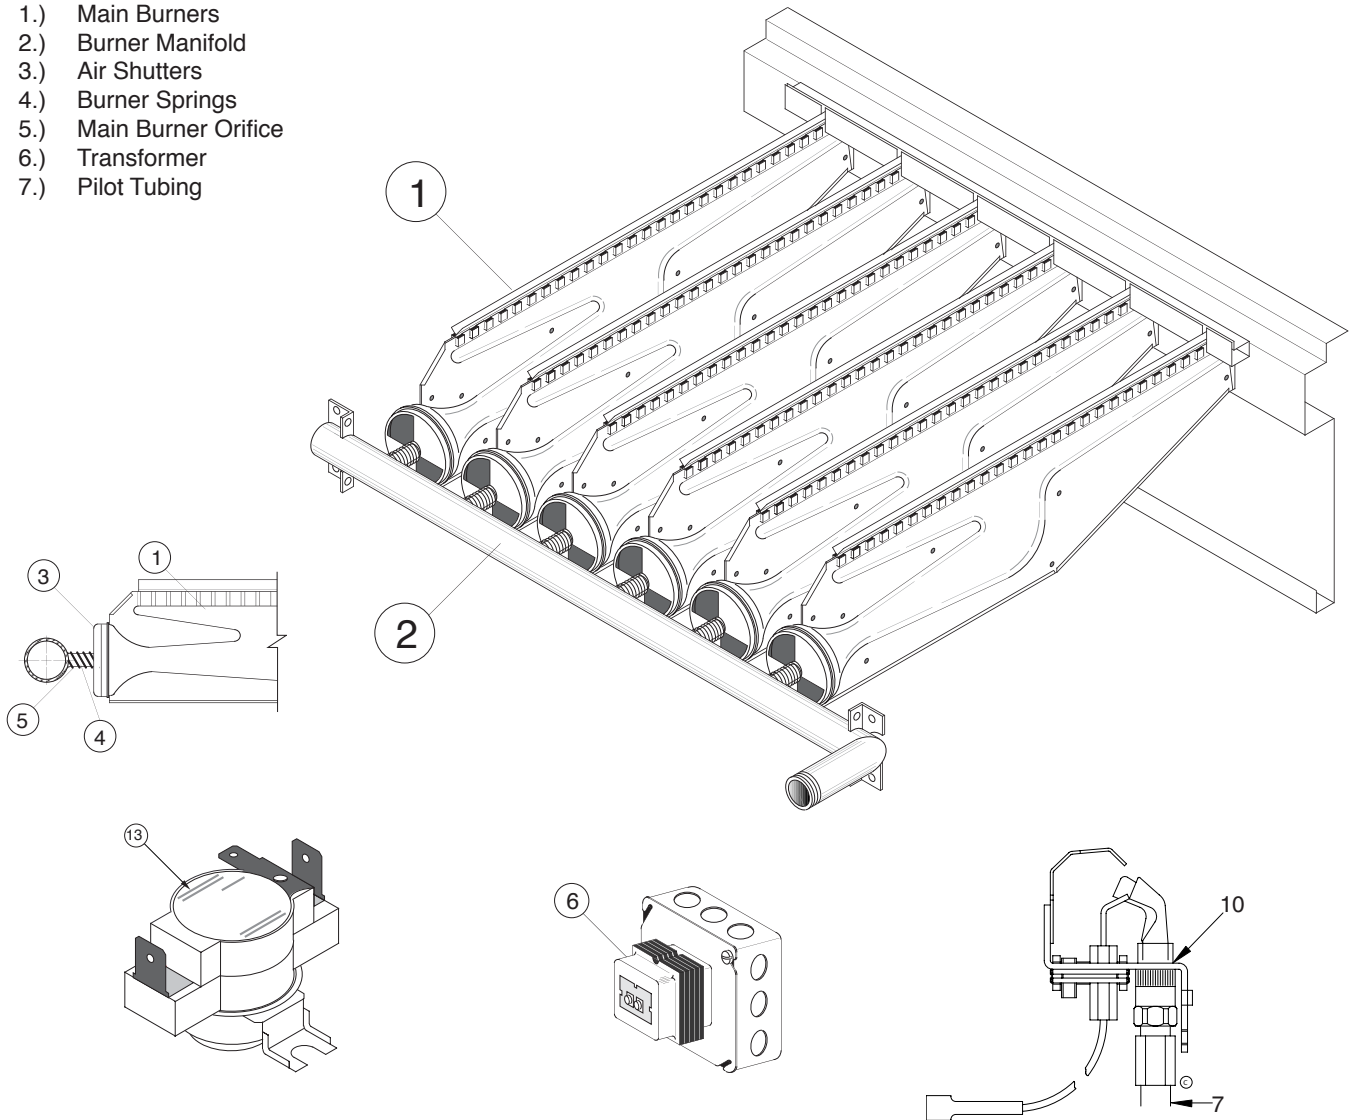

**CONTROLS:**

- 8A.) Main Gas Valve (Honeywell)
- 8B.) Main Gas Valve (White Rodgers)
- 9.) Honeywell Ignitor
- 10.) Honeywell Pilot Burner
- 13.)\* High Limit

\*This safety device is located on the rear header plate of the heat exchanger (air inlet side).

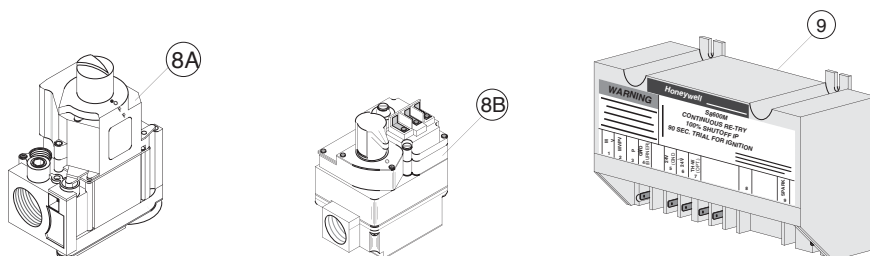

## GAS INPUT RATE

Check the gas input rate as follows (Refer to general safety section for metric conversions/SI units):

**▲ CAUTION** Never overfire the unit heater, as this may cause unsatisfactory operation or shorten the life of the heater.

1. Turn off all gas appliances that use gas through the same meter as the unit heater.
2. Turn gas on to the unit heater.
3. Clock the time in seconds required to burn one cubic foot of gas by checking the gas meter.
4. Insert the time required to burn one cubic foot of gas into the following formula and compute the input rate.

$$\frac{3600 \text{ (Sec. Per Hr.)} \times \text{Btu/Cu. Ft}}{\text{Time (Sec.)}} = \text{Input Rate}$$

For example, assume the Btu content of one cubic foot of gas equalled 1000 and that it takes 18 seconds to burn one cubic foot of gas.

$$\frac{3600 \times 1000}{18} = 200,000 \text{ Btu/Hr.}$$

**NOTICE:** If the computation exceeds or is less than 95 percent of the gas Btu/hr. input rating (see Specifications), adjust the gas pressure.

## GAS PRESSURE ADJUSTMENTS

Adjust the gas pressure as follows:

1. **NATURAL GAS:** Optimum results are obtained when the unit heater is operating at its full input rating with the manifold pressure of 3.5 inches W.C. (0.9 kPa). Adjustment of the pressure regulator is not normally necessary since it is preset at the factory. However, field adjustment may be made as follows:
  - (a.) Attach manometer at pressure tap plug adjacent to the control outlet.
  - (b.) Remove regulator adjustment screw cap, located on combination gas valve.
  - (c.) With a small screwdriver, rotate the adjustment screw counterclockwise to decrease or clockwise to increase pressure. Do not force beyond stop limits.
  - (d.) Replace regulator adjustment screw cap.
2. **PROPANE GAS:** An exact manifold pressure of 10.0 inches W.C. (2.5 kPa) must be maintained for proper operation of the unit heater. If the unit is equipped with a pressure regulator on the combination gas valve, follow steps “a” through “d” above. If the unit is not so equipped, the propane gas supply system pressure must be regulated to attain this manifold operating pressure.
3. The adjusted manifold pressure should not vary more than 10% from the pressure specified in Table 5.

**Table 5 - Main Burner Orifice Schedule\***

* INPUT IN 1000 BTU	TYPE OF GAS	NATURAL	PROPANE	NO. OF BURNER ORIFICES
	HEATING VALUE	1075 BTU/Ft <sup>3</sup> (40.1 MJ/m <sup>3</sup> )	2500 BTU/Ft <sup>3</sup> (93.1 MJ/m <sup>3</sup> )	
	MANIFOLD PRESSURE	3.5" W.C. (0.87kPa)	10" W.C. (2.49 kPa)	
30	FT <sup>3</sup> /HR	28	12	2
	ORIFICE DRILL	49	57	
45	FT <sup>3</sup> /HR	42	18	3
	ORIFICE DRILL	49	57	
60	FT <sup>3</sup> /HR	56	24	4
	ORIFICE DRILL	49	57	
75	FT <sup>3</sup> /HR	70	30	5
	ORIFICE DRILL	49	57	
100	FT <sup>3</sup> /HR	96	40	4
	ORIFICE DRILL	42	54	
125	FT <sup>3</sup> /HR	120	50	5
	ORIFICE DRILL	42	54	
150	FT <sup>3</sup> /HR	140	60	6
	ORIFICE DRILL	42	54	
175	FT <sup>3</sup> /HR	163	70	7
	ORIFICE DRILL	42	54	
200	FT <sup>3</sup> /HR	186	80	8
	ORIFICE DRILL	42	54	
225	FT <sup>3</sup> /HR	210	90	9
	ORIFICE DRILL	42	54	
250	FT <sup>3</sup> /HR	233	100	10
	ORIFICE DRILL	42	54	
300	FT <sup>3</sup> /HR	280	120	12
	ORIFICE DRILL	42	54	
350	FT <sup>3</sup> /HR	326	140	14
	ORIFICE DRILL	42	54	
400	FT <sup>3</sup> /HR	372	160	16
	ORIFICE DRILL	42	54	

\* This schedule is for units operating at normal altitudes of 2000 ft. (610m) or less. SPECIAL ORIFICES ARE REQUIRED FOR INSTALLATIONS ABOVE 2,000 FT. (610M).

When installed in Canada, any references to deration at altitudes in excess of 2000 feet (610m) are to be ignored. At altitudes of 2000 to 4500 feet (610 to 1372m), the unit heaters must be orificed to 90% of the normal altitude rating, and be so marked in accordance with the CSA certification.


## PRIMARY AIR SHUTTER ADJUSTMENT

After the unit has been operating for at least 15 minutes, adjust the primary air flow to the burners. Turn the friction-locked, manually-rotated air shutters clockwise to close, or counterclockwise to open (see Figures 11, 12, 14 and 16).

**▲ CAUTION** For correct air adjustment, close the air shutter until yellow tips in the flame appear. Then open the air shutter to the point just beyond the position where yellow tipping disappears. Refer to Figure 12 .

**NOTICE:** There may be momentary and spasmodic orange flashes in the flame. This is caused by the burning of airborne dust particles, and not to be confused with the yellow tipping, which is a stable or permanent situation when there is insufficient primary air.

**Figure 12 - Main Burner Flames**

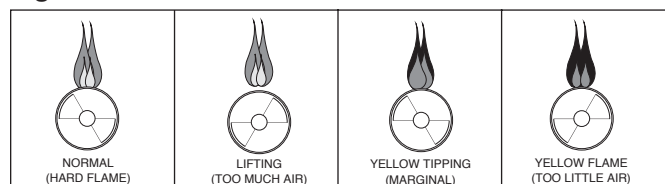



## PILOT ADJUSTMENT

1. Remove the pilot adjustment cap.
2. Adjust the pilot screw to provide a properly sized flame.
3. A proper pilot flame is a soft steady flame that envelops 3/8 to 1/2-inch (9.5 to 12.7 mm) of the flame sensor.
4. Replace the pilot adjustment cap.

## MANIFOLD PRESSURE ADJUSTMENT

If the manifold pressure requires minor adjustment, remove the cap from the pressure regulator and turn the adjustment screw clockwise to increase the pressure, or counterclockwise to decrease the pressure. The adjusted manifold pressure should not vary more than 10% from the pressures specified in Table 5.

# MAINTENANCE

## PERIODIC SERVICE

**NOTICE: The heater and vent system should be checked once a year by a qualified technician.**

All Maintenance/Service information should be recorded accordingly on the Inspection Sheet provided in this manual.

**▲ WARNING** Open all disconnect switches and disconnect all electrical and gas supplies and secure in that position before servicing unit. Failure to do so may result in personal injury or death from electrical shock.

**▲ WARNING** Gas tightness of the safety shut-off valves must be checked on at least an annual basis.

To check gas tightness of the safety shut-off valves, turn off the manual valve upstream of the appliance combination control. Remove the 1/8 inch pipe plug on the inlet side of the combination control and connect a manometer to that tapping. Turn the manual valve on to apply pressure to the combination control. Note the pressure reading on the manometer, then turn the valve off. A loss of pressure indicates a leak. If a leak is detected, use a soap solution to check all threaded connections. If no leak is found, combination control is faulty and must be replaced before putting appliance back in service.

Should maintenance be required, perform the following inspection and service routine:

1. Inspect the area near the unit to be sure that there is no combustible material located within the minimum clearance requirements listed in this manual.

**▲ WARNING** Under no circumstances should combustible material be located within the clearances specified in this manual. Failure to provide proper clearance could result in personal injury or equipment damage from fire.

2. Turn off the manual gas valve and electrical power to the gas unit heater.

3. To clean or replace the main burners, remove the bottom panel and compress the spring by moving the burner toward the manifold. Slide the opposite end of the burner downward from the locating slot while retaining spring is still compressed. Pull the burners away from the heat.
4. With the burners removed, wire brush the inside surfaces of the heat exchanger.
5. Remove any dirt, dust, or other foreign matter from the burners using a wire brush and/or compressed air. Ensure that all parts are unobstructed. Inspect and clean pilot burner if necessary.
6. Reassemble the gas unit heater by replacing all parts in reverse order.
7. Complete the appropriate unit start-up procedure as given in the "Operation" section of this manual (see lighting instruction plate on the unit).
8. Check the burner adjustment. See the "Primary Air Shutter Adjustment" section of this manual.
9. Check all gas control valves and pipe connections for leaks.
10. Check the operation of the automatic gas valve by lowering the setting of the thermostat, stopping the operation of the gas unit heater. The gas valve should close tightly, completely extinguishing the flame on the main burners.
11. Inspect and service the motor/fan assemblies. To maintain efficient air flow, inspect and clean the fan blades and guard to prevent buildup of foreign matter.
12. Check lubrication instructions on the motor. If oiling is required, add 3 to 4 drops of electric motor oil as follows:
  - (a.) Light Duty - After 3 years or 25,000 hours of operation.
  - (b.) Average Duty - Annually after 3 years or 8,000 hours of operation.
  - (c.) Heavy Duty - Annually after 1 year or at least every 1500 hours of operation.

**▲ CAUTION** Never over oil the motor or premature failure may occur!

13. Check and test the operational functions of all safety devices supplied with your unit.

**Table 6 - Power Vented Propellers Troubleshooting Guide**

SYMPTOMS	POSSIBLE CAUSE(S)	CORRECTIVE ACTION
A. Flame lifting from burner ports.	<ol style="list-style-type: none"> <li>1. Pressure regulator set too high.</li> <li>2. Defective Regulator.</li> <li>3. Burner orifice too large.</li> </ol>	<ol style="list-style-type: none"> <li>1. Reset manifold pressure. Refer to "Operation".</li> <li>2. Replace regulator section of combination gas valve or complete valve.</li> <li>3. Check with local gas supplier for proper orifice size and replace. Refer to "Operation".</li> </ol>
B. Flame pops back.	<ol style="list-style-type: none"> <li>1. Excessive primary air.</li> <li>2. Burner orifice too small.</li> </ol>	<ol style="list-style-type: none"> <li>1. Close air shutter. Refer to "Operation".</li> <li>2. Check with local gas supplier for proper orifice size and replace. Refer to "Operation".</li> </ol>
C. Noisy flame.	<ol style="list-style-type: none"> <li>1. Too much primary air.</li> <li>2. Noisy pilot.</li> <li>3. Irregular orifice causing whistle or resonance.</li> <li>4. Excessive gas input.</li> </ol>	<ol style="list-style-type: none"> <li>1. Close air shutter.</li> <li>2. Reduce pilot gas. Refer to "Operation".</li> <li>3. Replace orifice.</li> <li>4. Reset manifold pressure. Refer to "Operation"; Replace regulator section of combination gas valve or complete valve; or Check with local gas supplier for proper orifice size and replace. Refer to "Operation".</li> </ol>
D. Yellow tip flame (some yellow tipping on propane gas is permissible).	<ol style="list-style-type: none"> <li>1. Insufficient primary air.</li> <li>2. Clogged main burner ports.</li> <li>3. Misaligned orifices.</li> <li>4. Clogged flue collector.</li> <li>5. Air shutter linted.</li> <li>6. Insufficient combustion air.</li> </ol>	<ol style="list-style-type: none"> <li>1. Open air shutters. Refer to "Operation".</li> <li>2. Clean main burner ports.</li> <li>3. Replace manifold assembly.</li> <li>4. Clean flue collector.</li> <li>5. Check for dust or lint at air mixer opening and around the air shutter.</li> <li>6. Clean combustion air inlet openings in bottom panel, see "Installation".</li> </ol>
E. Floating flame.	<ol style="list-style-type: none"> <li>1. Blocked venting.</li> <li>2. Insufficient combustion air.</li> <li>3. Blocked heat exchanger.</li> <li>4. Air leak into combustion chamber or flue collector.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean flue. Refer to "Installation".</li> <li>2. Clean combustion air inlet openings in bottom panel, see "Installation".</li> <li>3. Clean heat exchanger.</li> <li>4. Determine cause and repair accordingly.</li> </ol>
<b>F. Gas Odor.</b>	<ol style="list-style-type: none"> <li><b>1. Shut off gas supply immediately!</b></li> <li>2. Blocked heat exchanger/venting.</li> <li>3. Drafts around heater.</li> <li>4. Negative pressure in building.</li> <li>5. Blocked flue collector.</li> </ol>	<ol style="list-style-type: none"> <li><b>1. Inspect all gas piping and repair.</b></li> <li>2. Clean heat exchanger/flue.</li> <li>3. Eliminate drafts. Refer to "Installation".</li> <li>4. See "Installation".</li> <li>5. Clean flue collector.</li> </ol>
G. Delayed ignition.	<ol style="list-style-type: none"> <li>1. Excessive primary air.</li> <li>2. Main burner ports clogged near pilot.</li> <li>3. Pressure regulator set too low.</li> <li>4. Pilot decreases in size when main burners come on.</li> <li>5. Pilot flame too small.</li> <li>6. Drafts around heater.</li> <li>7. Improper venting.</li> </ol>	<ol style="list-style-type: none"> <li>1. Close air shutter. Refer to "Operation".</li> <li>2. Clean main burner ports.</li> <li>3. Reset manifold pressure. Refer to "Operation".</li> <li>4. Supply piping is inadequately sized. Refer to "Installation".</li> <li>5. Clean pilot orifice. Refer to "Operation".</li> <li>6. Eliminate drafts. Refer to "Installation".</li> <li>7. Refer to "Installation".</li> </ol>
H. Failure to ignite.	<ol style="list-style-type: none"> <li>1. Main gas off.</li> <li>2. Lack of power at unit.</li> <li>3. Thermostat not calling for heat.</li> <li>4. Defective limit switch.</li> <li>5. Improper thermostat or transformer wiring at gas valve.</li> <li>6. Defective gas valve.</li> </ol>	<ol style="list-style-type: none"> <li>1. Open all manual gas valves.</li> <li>2. Replace fuse or turn on power supply.</li> <li>3. Turn up thermostat.</li> <li>4. Check limit switch with continuity tester. If open, replace limit switch.</li> <li>5. Check wiring per diagrams.</li> <li>6. Replace gas valve.</li> </ol>

## Power Vented Propellers Troubleshooting Guide

SYMPTOMS	POSSIBLE CAUSE(S)	CORRECTIVE ACTION
	<ul style="list-style-type: none"> <li>7. Defective thermostat.</li> <li>8. Defective transformer.</li> <li>9. Loose wiring.</li> <li>10. Defective ignition control.</li> </ul>	<ul style="list-style-type: none"> <li>7. Check thermostat and replace if defective.</li> <li>8. Be sure 115 volts is supplied to the transformer primary, then check for 24 volts at secondary terminal before replacing.</li> <li>9. Check and tighten all wiring connections per diagrams.</li> <li>10. Replace, if necessary. Also see W, X &amp; Y symptoms.</li> </ul>
J. Condensation of water vapor.	<ul style="list-style-type: none"> <li>1. Improper venting.</li> </ul>	<ul style="list-style-type: none"> <li>1. Refer to "Installation, Venting".</li> </ul>
K. Burner won't turn off.	<ul style="list-style-type: none"> <li>1. Poor thermostat location.</li> <li>2. Defective thermostat.</li> <li>3. Improper thermostat or transformer former wiring at gas valve.</li> <li>4. Short circuit.</li> <li>5. Defective or sticking gas valve.</li> <li>6. Excessive gas supply pressure.</li> </ul>	<ul style="list-style-type: none"> <li>1. Relocate thermostat away from drafts.</li> <li>2. Replace thermostat.</li> <li>3. Check wiring per diagrams.</li> <li>4. Check operation at valve. Look for short (such as staples piercing thermostat wiring), and correct.</li> <li>5. Replace gas valve.</li> <li>6. Refer to "Operation".</li> </ul>
L. Rapid burner cycling.	<ul style="list-style-type: none"> <li>1. Loose electrical connections at gas valve or thermostat.</li> <li>2. Excessive thermostat heat anticipator.</li> <li>3. Unit cycling on high limit.</li> <li>4. Poor thermostat location.</li> <li>5. Draft on Pilot.</li> <li>6. Defective ignitor control (if applicable).</li> <li>7. Unit cycling on high limit.</li> <li>8. Defective high limit switch.</li> </ul>	<ul style="list-style-type: none"> <li>1. Tighten all electrical connections.</li> <li>2. Adjust thermostat heat anticipator for longer cycles. Refer to "Operation".</li> <li>3. Check for proper air supply across heat exchanger.</li> <li>4. Relocate thermostat. (Do not mount thermostat on unit).</li> <li>5. Eliminate drafts. Refer to Installation.</li> <li>6. Replace ignitor.</li> <li>7. Check for proper air supply across heat exchanger.</li> <li>8. Jumper limit switch terminals 1 and 2. If burner operates normally, replace switch.</li> </ul>
M. Noisy	<ul style="list-style-type: none"> <li>1. Fan blades loose.</li> <li>2. Fan blades dirty.</li> <li>3. Vibration isolators deteriorated.</li> <li>4. Bearings are dry.</li> </ul>	<ul style="list-style-type: none"> <li>1. Replace or tighten.</li> <li>2. Clean fan wheel.</li> <li>3. Replace vibration isolators.</li> <li>4. Oil bearings on fan motor. (Refer to label on motor).</li> </ul>
N. Pilot will not light or will not stay lit.	<ul style="list-style-type: none"> <li>1. Main gas off.</li> <li>2. Pilot adjustment screw turned too low on combination/automatic main gas valve.</li> <li>3. Air in gas line.</li> <li>4. Incorrect lighting procedure.</li> <li>5. Dirt in pilot orifice.</li> <li>6. Extremely high or low gas pressure.</li> <li>7. Defective thermocouple.</li> <li>8. Drafts around unit.</li> <li>9. Pilot valve not opening (faulty wiring).</li> <li>10. No spark (faulty wiring).</li> <li>11. Defective gas valve.</li> </ul>	<ul style="list-style-type: none"> <li>1. Open all manual gas valves.</li> <li>2. Increase size of pilot flame. Refer to "Operation".</li> <li>3. Purge air from gas supply.</li> <li>4. Follow lighting instruction label adjacent to gas valve.</li> <li>5. Remove pilot orifice. Clean with compressed air or solvent. (Do not ream).</li> <li>6. Refer to "Operation".</li> <li>7. Check thermocouple connection, and replace if defective.</li> <li>8. Eliminate drafts. Refer to "Installation".</li> <li>9. Inspect and correct all wiring.</li> <li>10. Inspect and correct ignition system wiring. See symptoms W, X, &amp; Y.</li> <li>11. Replace.</li> </ul>

## Power Vented Propellers Troubleshooting Guide

SYMPTOMS	POSSIBLE CAUSE(S)	CORRECTIVE ACTION
O. Fan will not run.	<ol style="list-style-type: none"> <li>1. Loose wiring.</li> <li>2. Defective motor overload protector or defective motor.</li> <li>3. Defective fan switch.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check and tighten all wiring connections per diagrams. Thermostat wires tagged "W" and "G" must be connected together (unless special thermostats are used; if so, see thermostat wiring diagram). See electrical connections.</li> <li>2. Replace motor.</li> <li>3. Check for 24V across H terminals on fan time delay switch. If 24V is present, jumper terminals numbered 1 and 3. If motor runs, the fan switch is defective and must be replaced. If 24V is not present, check wiring per diagrams.</li> </ol>
P. Fan motor turns on and off while burner is operating.	<ol style="list-style-type: none"> <li>1. Fan switch heater element improperly wired.</li> <li>2. Defective fan switch.</li> <li>3. Motor overload protector cycling on and off.</li> <li>4. Motor not properly oiled.</li> </ol>	<ol style="list-style-type: none"> <li>1. Be sure fan switch heater terminals are connected per diagrams.</li> <li>2. Replace fan switch.</li> <li>3. Check motor amps against motor name plate rating, check voltage, replace fan motor if defective.</li> <li>4. Refer to label on motor.</li> </ol>
Q. Fan motor will not stop.	<ol style="list-style-type: none"> <li>1. Improperly wired fan control.</li> <li>2. Main burners not lighting while thermostat calls for heat.</li> <li>3. Defective fan switch.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check all wiring.</li> <li>2. Refer to H or N symptoms.</li> <li>3. Replace fan switch.</li> </ol>
R. Not enough heat.	<ol style="list-style-type: none"> <li>1. Incorrect gas input.</li> <li>2. Heater undersized.</li> <li>3. Thermostat malfunction.</li> <li>4. Heater cycling on limit control.</li> </ol>	<ol style="list-style-type: none"> <li>1. Refer to "Operation".</li> <li>2. This is especially true when the heated space is enlarged. Have the heat loss calculated and compare to the heater output (80% of input). Your gas supplier or installer can furnish this information. If heater is under sized, add additional heaters.</li> <li>3. Replace thermostat.</li> <li>4. There should be NO ducts attached to the front of this heater. Check air movement through heat exchanger. Check voltage to fan motor. Clean fan blade and heat exchanger and oil fan motor.</li> </ol>
T. Too much heat.	<ol style="list-style-type: none"> <li>1. Thermostat malfunction.</li> <li>2. Heater runs continuously.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace thermostat.</li> <li>2. Check wiring per diagrams; Check operation at valve. Look for short (such as staples piercing thermostat wiring), and correct; Replace gas valve; Refer to "Operation".</li> </ol>
U. Cold air is delivered on start up.	<ol style="list-style-type: none"> <li>1. Fan switch heater element improperly wired.</li> </ol>	<ol style="list-style-type: none"> <li>1. Be sure fan switch heater terminals are connected per diagrams.</li> </ol>
V. Cold air is delivered during heater operation.	<ol style="list-style-type: none"> <li>1. Incorrect manifold pressure or input.</li> <li>2. Voltage to unit too high.</li> <li>3. Air through put too high.</li> </ol>	<ol style="list-style-type: none"> <li>1. Refer to "Operation".</li> <li>2. Check motor voltage with fan running. Should be 115 volts AC.</li> <li>3. Refer to "Operation".</li> </ol>
W. No Spark.	<ol style="list-style-type: none"> <li>1. Thermostat not calling for heat.</li> <li>2. No low voltage.</li> <li>3. Spark gap closed or too wide.</li> <li>4. Broken or cracked ceramic on spark electrode.</li> </ol>	<ol style="list-style-type: none"> <li>1. Close thermostat contacts.</li> <li>2. Check for 24V across 24V terminals of S8600.</li> <li>3. Set gap to 0.1".</li> <li>4. Replace pilot assembly.</li> </ol>


## Power Vented Propellers Troubleshooting Guide

SYMPTOMS	POSSIBLE CAUSE(S)	CORRECTIVE ACTION
X. Spark present but pilot does not light.	<ol style="list-style-type: none"> <li>1. Loose S8600 connections.</li> <li>2. Improper gas pressure.</li> <li>3. Is spark in pilot gas stream?</li> <li>4. No pilot gas — do not use match to test - presence of gas is easily detected by the odor.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check all connections, term. PV feeds 24V to pilot valve.</li> <li>2. Check pressure — pressure that is either too high or too low may cause a problem.</li> <li>3. Spark should arc from electrode.</li> <li>4. Check pilot line for kinks. Ensure there are no drafts.</li> </ol>
Y. Pilot lights — Main valve does not energize.	<ol style="list-style-type: none"> <li>1. Loose S8600 connections.</li> <li>2. Cracked or broken sensor ceramic.</li> <li>3. Check sensor/spark lead for continuity.</li> <li>4. Measure 24 volts from term. MV to term. MV/PV.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check connections-term. MV feeds main valve.</li> <li>2. Replace pilot assembly.</li> <li>3. Replace if needed.</li> <li>4. If present, replace main valve; if not, replace S8600 Igniter.</li> </ol>
Z. Hi-Limit switch tripping.	<ol style="list-style-type: none"> <li>1. Vertical run of flue is too short.</li> <li>2. Unit is overfiring.</li> <li>3. Air flow too low</li> <li>4. Defective switch.</li> </ol>	<ol style="list-style-type: none"> <li>1. Lengthen vertical run of flue pipe (see venting).</li> <li>2. Burner orifice may be too large: verify/replace if req'd.</li> <li>3. Increase air flow; check fan size. Check for proper voltage.</li> <li>4. Replace.</li> </ol>
AA. Noisy power venter.	<ol style="list-style-type: none"> <li>1. Power venter wheel loose.</li> <li>2. Power venter wheel dirty.</li> <li>3. Power venter wheel rubbing housing.</li> <li>4. Bearings are dry.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace or tighten.</li> <li>2. Clean power venter wheel.</li> <li>3. Realign power venter wheel.</li> <li>4. Oil bearings on power venter motor. (Refer to label on motor).</li> </ol>
BB. Power venter will not run.	<ol style="list-style-type: none"> <li>1. Loose wiring.</li> <li>2. Defective motor overload protector or defective motor.</li> <li>3. Defective power venter relay.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check and tighten all wiring connections per diagrams. Thermostat wires tagged "W" and "G" must be connected together (unless special thermostats are used; if so, see thermostat wiring diagram). See electrical connections.</li> <li>2. Replace motor.</li> <li>3. Check for 24V across 1 and 3 terminals on fan relay. If 24V is present, jumper terminals numbered 2 and 4. If motor runs, the relay is defective and must be replaced. If 24V is not present, check wiring per diagrams.</li> </ol>
CC. Power venter motor turns on and off while burner is operating.	<ol style="list-style-type: none"> <li>1. Fan relay heater element improperly wired.</li> <li>2. Defective venter relay switch.</li> <li>3. Motor overload protector cycling on and off.</li> <li>4. Motor not properly oiled.</li> </ol>	<ol style="list-style-type: none"> <li>1. Be sure venter relay heater terminals are connected per diagrams.</li> <li>2. Replace venter relay.</li> <li>3. Check motor amps against motor name plate rating, check voltage, replace power venter motor if defective.</li> <li>4. Refer to label on motor.</li> </ol>
DD. Power Venter motor will not stop.	<ol style="list-style-type: none"> <li>1. Improperly wired venter relay.</li> <li>2. Main burners not lighting while thermostat calls for heat.</li> <li>3. Defective venter relay.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check all wiring.</li> <li>2. Refer to H &amp; N symptoms.</li> <li>3. Replace venter relay.</li> </ol>

# IDENTIFICATION OF PARTS PROPELLER UNIT HEATERS


**Figure 13  
Propeller Parts**

- 115/1/60 MOTOR
- FAN GUARD
- FAN BLADE
- HARDWARE

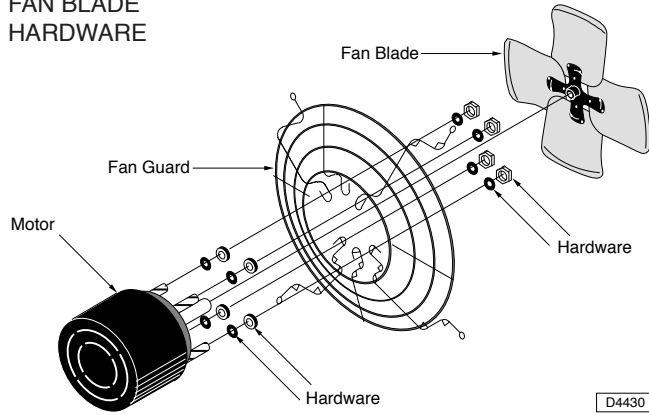


D4430

**Figure 14  
Components Parts  
(Bottom View)**

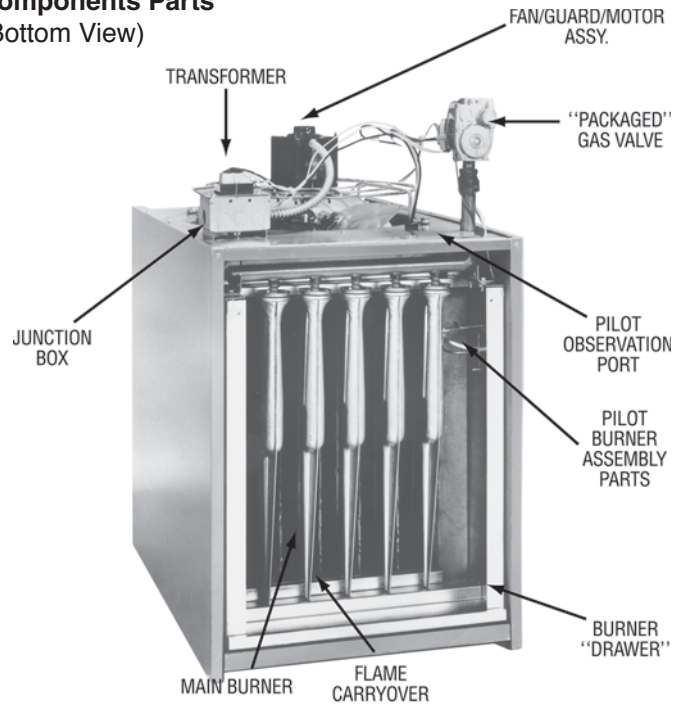


**Figure 15  
Internal Furnace Components**

1. HEAT EXCHANGER
2. FLUE COLLECTOR
3. BURNER DRAWER

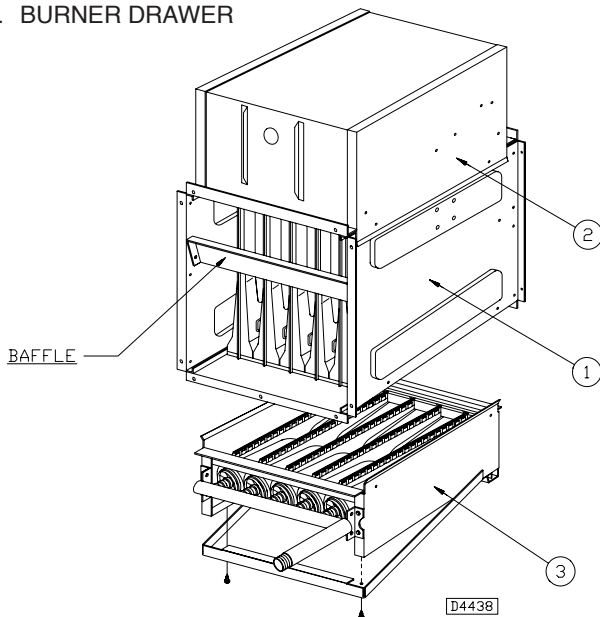


D4438

**Figure 16  
Burner Assy' Parts**

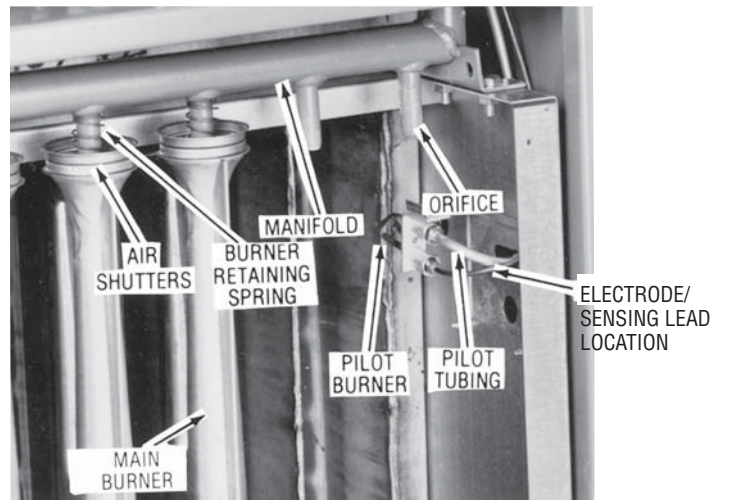

**Figure 17 - Power Venter Assembly**

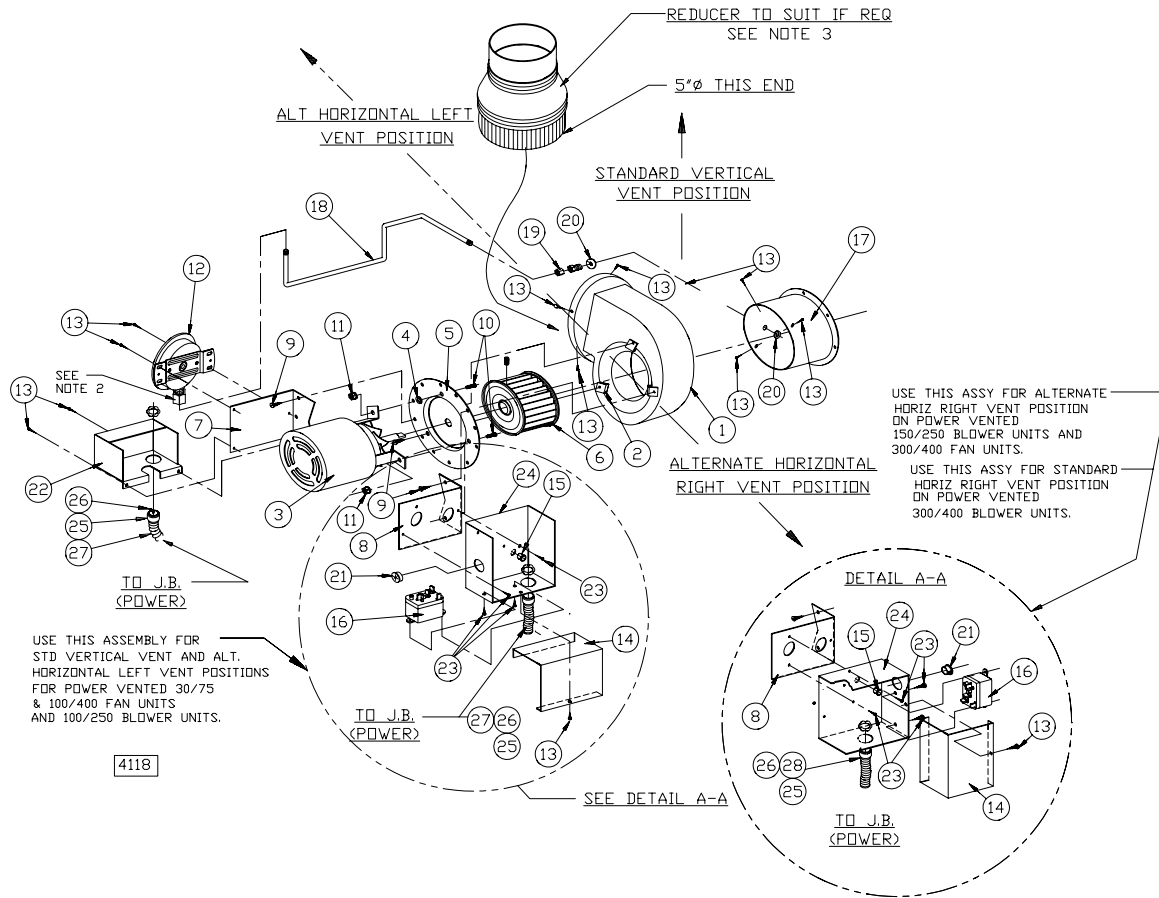

REF. NO.	DESCRIPTION	REF. NO.	DESCRIPTION
1	Blower Housing Assembly	13	Drill Screw
2	Speed Nut	14	Junction Box Cover
3	Motor	15	Snap Bushing
4	Washer, Plain	16	Relay (Motor)
5	Plate Adapter	17	Draftor Stack Assembly
6	Blower Wheel*	18	Tubing (Aluminum) Formation
7	Mounting Bracket (Pressure Switch)	19	Male Connector
8	Mounting Bracket (Junction Box)	20	Locknut
9	Screw, S.T.	21	Hole Plug
10	Screw, Machine (L = 3/4")	22	Pressure Switch Cover
11	Nut, Keps (Ext. Lock Washer)	23	Drill Screw
12	Air Pressure Switch	24	Junction Box Base

**NOTES:**


- \*1) For item No. 6, use counter-clockwise rotation.
- 2) **DO NOT OVERTIGHTEN CELCON NUT! HAND TIGHTEN ONLY! DO NOT USE TOOLS!**  
Approximate 1/3 turn maximum or 8 inch pounds is sufficient from the point where the tube does not slip in or out.
- 3) Flue Sizes:  
 30/75 units: 4" dia. flue outlet Reducer required – To be supplied by installer.  
 100/175 units: 4" dia. flue outlet Reducer required – To be supplied by installer.  
 200/250 units: 5" dia. flue outlet (no adapter required).  
 300/400 units: 6" dia. flue outlet In increaser required – To be supplied by manufacturer.

**INSTALLATION INSTRUCTIONS FOR FIELD  
REPLACEMENT OF POWER VENTER MOTOR**

**▲ WARNING** Never service any component without first disconnecting all electrical and gas supplies. Refer to unit's wiring diagram. This replacement must be performed only by a qualified technician.

**NOTICE:** All hardware (screws, nuts, washers) that will be removed from the unit will be reused for this motor replacement. **DO NOT LOSE ANY OF THESE PARTS!**

**Figure 18 - Identification of Parts**

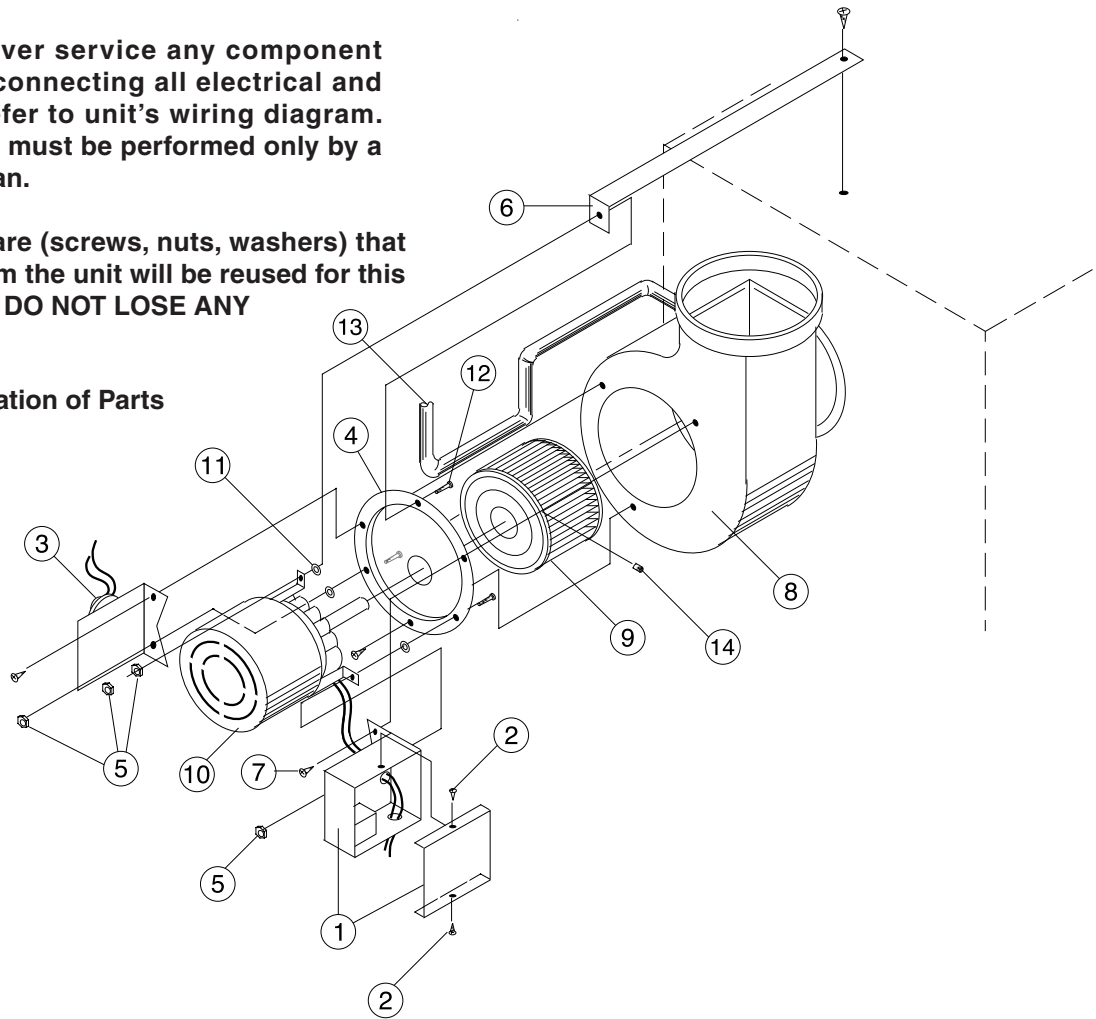

REF. NO.	DESCRIPTION
1	Relay Junction Box/Mounting Bracket Assembly
2	#8 Drill Screws (2 required)
3	Pressure/Mounting Bracket Assembly
4	Mounting Plate Adapter
5	Keps Nut w/External Tooth Lockwasher (4 required)
6	Motor Support Shipping Bracket
7	Phillips Head Screws (3 required)
8	Power Venter Blower Housing
9	Blower Wheel
10	Motor
11	Space Washers (3 required)
12	Machine Screw (3 required)
13	Sensing Tube
14	Set Screw

**TOOLS AND PARTS NEEDED:**

Wire Stripper and Crimper; Slotted Head and #2 Phillips Head Screwdriver; 3/8" Wrench; 1/8" Allen Wrench (long handle); marker; (1) 1/4" push on terminal for Wire

**NOTES:**

- 1) Remove the cover from the Relay Junction Box (Item 1) by removing two screws (Item 2) top and bottom. Disconnect both wires from the motor lead ends. One is connected to terminal #4 on the venter relay, and the other is connected with a wire nut to a black wire.
- 2) Remove the sensing tube (Item 13) from the Pressure Switch/Mounting Bracket (Item 3) at motor end only. Separated Combustion Units: Remove both tubes at motor end only - note location.
- 3) Mark locations of the Relay Junction Box and Pressure Switch Mounting Brackets along with the Motor (Item 10) mounts on the Mounting Adapter Plate (Item 4) - using a marker.
- 4) Remove nut (Item 5) that secures the Motor Support Shipping Bracket (Item 6) to the Mounting Adapter Plate. Pull this bracket away from the Motor Mounting Adapter Plate.
- 5) Remove three phillips head screws (Item 7) on the Motor Mounting Adapter Plate. Remove the Motor/Blower Wheel/Adapter Plate assembly from the Power Venter Blower Housing (Item 8).
- 6) Remove the Blower Wheel (Item 9) from the motor shaft - by removing the set screw (Item 14) using a 1/8" Allen Wrench.
- 7) Remove the three Motor Mounting Nuts (Item 5), Space Washers (Item 11), and Screws (Item 12). Do not loose these parts! Using caution - the motor will disengage from the Mounting Adapter Plate, along with the Relay Junction Box and Pressure Switch Mounting Brackets will also disengage.
- 8) Reverse Order to install the new Power Venter Motor.
- 9) **TEST FIRE THE UNIT FOR A FEW CYCLES, MAKING SURE THAT THE UNIT IS OPERATING SATISFACTORY.**



## HOW TO ORDER REPLACEMENT PARTS

Please send the following information to your local representative. If further assistance is needed, contact the manufacturer's customer service department.

- Model number
- Serial Number (if any)
- Part description and Number as shown in the Replacement Parts Catalog.

---

### LIMITED WARRANTY

#### POWER VENTED PROPELLER UNIT HEATERS

1. The "Manufacturer" warrants to the original owner at original installation site that the above model Gas-Fired Heater ("the Product") will be free from defects in material or workmanship for one (1) year from the date of shipment from the factory, or one and one-half (1½) years from the date of manufacture, whichever occurs first. The Manufacturer further warrants that the complete heat exchanger, draft hood/flue collector assembly, and burners will be free from defects in material or workmanship for a period of ten (10) years from date of manufacture. If upon examination by the Manufacturer the Product is shown to have a defect in material or workmanship during the warranty period, the Manufacturer will repair or replace, at its option, that part of the Product which is shown to be defective.
2. This limited warranty does not apply:
  - (a) if the Product has been subjected to misuse or neglect, has been accidentally or intentionally damaged, has not been installed, maintained or operated in accordance with the furnished written instructions, or has been altered or modified in any way by any unauthorized person.
  - (b) to any expenses, including labor or material, incurred during removal or reinstallation of the Product.
  - (c) to any damage due to corrosion by chemicals, including halogenated hydrocarbons, precipitated in the air.
  - (d) to any workmanship of the installer of the Product.
3. This limited warranty is conditional upon:
  - (a) advising the installing contractor, who will in turn notify the distributor or manufacturer.
  - (b) shipment to the Manufacturer of that part of the Product thought to be defective. Goods can only be returned with prior written approval of the Manufacturer. All returns must be freight prepaid.
  - (c) determination in the reasonable opinion of the Manufacturer that there exists a defect in material or workmanship.
4. Repair or replacement of any part under this Limited Warranty shall not extend the duration of the warranty with respect to such repaired or replaced part beyond the stated warranty period.
5. **THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, AND ALL SUCH OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED AND EXCLUDED FROM THIS LIMITED WARRANTY. IN NO EVENT SHALL THE MANUFACTURER BE LIABLE IN ANY WAY FOR ANY CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES OF ANY NATURE WHATSOEVER, OR FOR ANY AMOUNTS IN EXCESS OF THE SELLING PRICE OF THE PRODUCT OR ANY PARTS THEREOF FOUND TO BE DEFECTIVE. THIS LIMITED WARRANTY GIVES THE ORIGINAL OWNER OF THE PRODUCT SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY BY EACH JURISDICTION.**

**In the interest of product improvement, we reserve the right to make changes without notice.**

**NOTES:**





260 NORTH ELM ST., WESTFIELD, MA 01085  
TEL: (413) 564-5540 FAX: (413) 562-5311

[www.sterlinghvac.com](http://www.sterlinghvac.com)



A MESTEK COMPANY