

# ACDU02 Communicating Service Tool

Operation Manual

97B0106N01

Rev.: 2/11/14



**Caution:**

These instructions are intended to be used by the installer or service personnel. End users are NOT advised to change or modify any of these settings. Doing so may cause the equipment to stop working properly and/or may void the warranty on both the thermostat and the equipment.

## Table of Contents

Section	Title	Page
1.0	Connection	3
2.0	Menu Structure	4
3.0	System Configuration	4
3.1	Airflow Selection	4
3.2	Option Selection	5
3.3	Unit Configuration	5
3.4	Pump Configuration	6
3.5	Valve Configuration	6
3.6	Multi-Unit Configuration	7
4.0	Service Mode	8
4.1	Manual Operation	8
4.2	Control Diagnostics	8
4.3	Dipswitch Configuration	9
4.4	Fault History	9
4.5	Clear Fault History	11
5.0	Revision History	12

This page was intentionally left blank.

## 1.0 Connection

ClimateMaster's Communicating Service Tool (ACDU02) allows install and service technicians to configure and diagnose ClimateMaster Digital Communicating Units without installing a digital communicating thermostat.



Using the Service Tool, a technician can ELECTRONICALLY:

1. Configure items like: airflow, heat pump options and configuration, pump or modulating valve operation, unit family, unit size, etc.


AND

2. Diagnose the unit by operating it manually, performing control diagnostics, viewing dip switch configurations, or by viewing fault history and operating conditions when a fault occurred.

The Service Tool connects to the DXM2 board with a 4-Wire Connector as shown below:

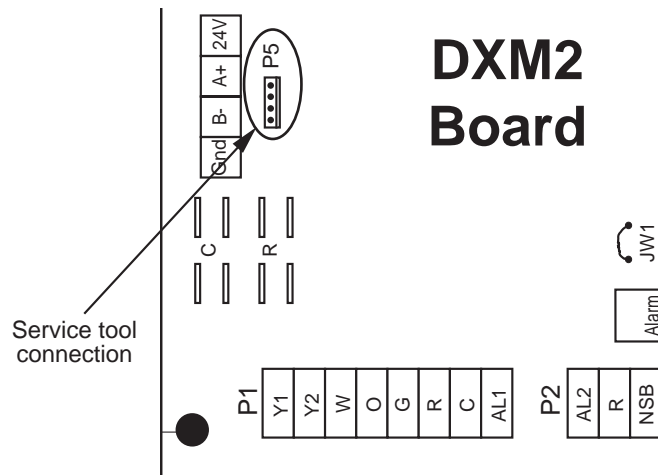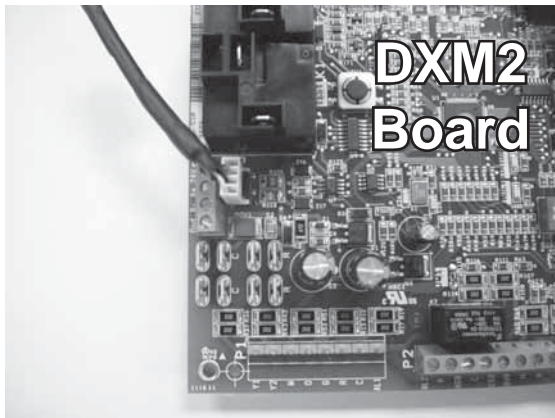

## 2.0 Menu Structure

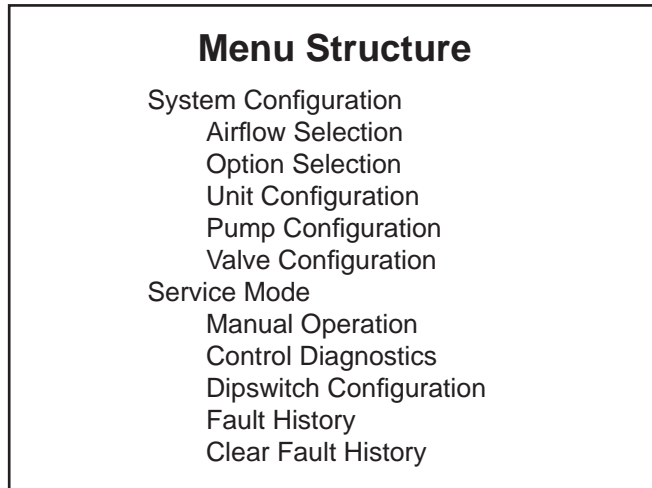

## 3.0 System Configuration

Use the System Configuration option on the start-up screen to adjust critical equipment settings.

The System Configuration information will be automatically obtained from each communicating control in the system.

Note 1: The Airflow Selection menu (section 3.1) will not be present if the connected communicating control system has no blower.

**Note 2:** The Pump Configuration menu (section 3.4) will not be present if the connected communicating control is configured for No Loop Configuration (OTHER).

**Note 3:** The Valve Configuration menu (section 3.5) will not be present if the connected communicating control is configured for No Loop Configuration (OTHER).


### 3.1 AIRFLOW SELECTION

Adjust the airflow settings for each system operating mode using the up/down arrow buttons. Press the center button to select each item.


- Airflow Settings (defaults stored in control) - valid range: obtained from control (in 25 CFM increments)
- Blower Off Delay (default 60 seconds) – valid range: 0 to 255 seconds (in 5 second increments)

NOTE 1: The Airflow Settings will only be present if the connected communicating control is configured for ECM blower.

NOTE 2: If multiple units are connected to one thermostat, refer to section 3.6 for unit selection.

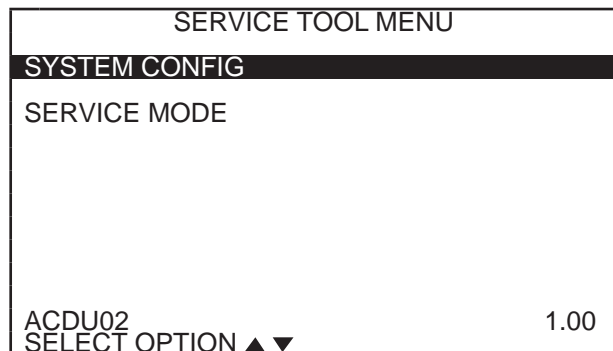

**Start-up Screen**

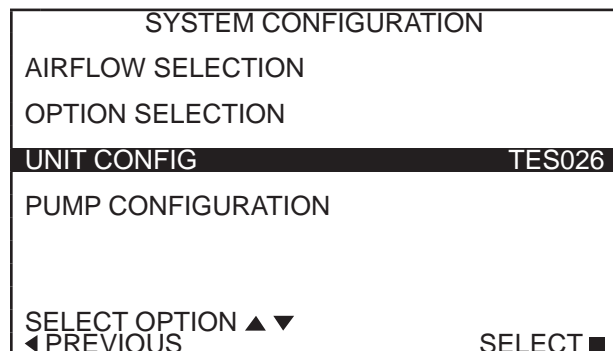

**System Configuration Menu**

### 3.2 OPTION SELECTION

This option allows the configuration of heat pump options to be modified.

Adjust the Option settings using the up/down arrow buttons. Press the center button to select each item.

- Motorized Valve (defaults stored in control) – valid range: Off, On “On” delays compressor start until the valve is fully open.
- Compressor ASCD (Anti-Short Cycle Delay (default stored in control) – valid range: 5 to 8 (in 1 minute increments)

NOTE 1: The Compressor Anti-Short Cycle Delay setting provides equipment protection by forcing the compressor to wait a few minutes before restarting.

NOTE 2: If multiple units are connected to one thermostat, refer to section 3.6 for unit selection.

**NOTE:** “Motorized Valve” used here refers to a two-position motorized water valve, not to be confused with the modulating motorized water valve found in the LOOP CONFIG.

### 3.3 UNIT CONFIGURATION

Adjust the Unit Configuration settings including Heat Pump Family, Heat Pump Size, Blower Type, and Loop Configuration using the up/down arrow buttons. Press the center button to select each item.

- Heat Pump Family (default stored in control) – valid range: TE, TY, TES, TEP, TRT, TSM
- Heat Pump Size (default stored in control) – valid range: depends on Heat Pump Family setting
- Blower Type (default stored in control) – valid range: NONE, PSC–2SPD, ECM, PSC–1SPD
- Loop Config (default stored in control) – valid range: Other, VS PUMP, MOD VALVE, MOD VALVE MIN POS

Airflow, pump and valves can be configured from ‘System Configuration’ screen.

Select ‘VS PUMP PARALLEL’ when applying an internal variable speed flow controller with other flow controllers on a single loop in parallel.

NOTE: Refer to section 3.6.3 for multi-unit configuration instructions.

OPTION SELECTION	
MOTORIZED VALVE	OFF
COMPRESSOR ASCD	0
SELECT OPTION ▲ ▼	
◀ PREVIOUS	SELECT ▶

Option Selection Menu

UNIT CONFIGURATION	
CURRENT CONFIG	TE026
HEAT PUMP FAMILY	TE
HEAT PUMP SIZE	026
BLOWER TYPE	ECM
LOOP CONFIG	VS PUMP PARALLEL
SELECT OPTION ▲ ▼	
◀ PREVIOUS	SAVE ▶

Unit Configuration Menu

### 3.4 PUMP CONFIGURATION

vFlow™ vs internal flow control pump can be controlled either through temperature differential (Delta T) or can be set to specific speed (fixed; % of full speed for each heat and cool stage).

Can be configured for either single pumping or parallel pumping.

Configure temperature differentials at the thermostat for vFlow™ units with an internal flow control pump.

Adjust the Pump Configuration settings using the up/down arrow buttons. Press the center button to select each item.

- Heating Delta T (default stored in control) – valid range: 4 to 12°F (in 1°F increments)
- Cooling Delta T (default stored in control) – valid range: 9 to 20°F (in 1°F increments)

Maximum Heat LWT (valid range based on specific model; refer to model IOM). Minimum Cool LWT (valid range based on specific model; refer to model IOM).

NOTE: Refer to section 3.6.3 for multi-unit configuration instructions.

To control vs pump by fixed speed, select 'Pump Control', press **■**, use down arrow to select 'Fixed', and press **■** to save.

Default stored in control. Valid range: 15% - 90% (in 1% increments)

Heating Stage 1                      Cooling Stage 1  
 Heating Stage 2                      Cooling Stage 2

If Pump Configuration is set to 'VS PUMP PARALLEL', valid range changes to 50-90% (in 1% increments).

### 3.5 VALVE CONFIGURATION

Configure temperature differentials at the thermostat for vFlow™ units with a motorized modulating valve.

Adjust the Valve Configuration settings using the up/down arrow buttons. Press the center button to select each item.

- Heating Delta T (default stored in control) – valid range: 4 to 12°F (in 1°F increments)
- Cooling Delta T (default stored in control) – valid range: 9 to 20°F (in 1°F increments)

NOTE 1: Minimum and Maximum degree values are shown only when the control is configured with the appropriate values.

NOTE 2: Refer to section 3.6.3 for multi-unit configuration instructions.

#### 3.5.1 MODULATING VALVE OFF POSITION

For certain commercial multi-unit applications, the modulating valve can be kept slightly open by choosing values 3.3-4.0.

VARIABLE SPD INTERNAL PUMP CONFIGURATION	
LOOP OPTION	PARALLEL
PUMP CONTROL	DELTA T
HEATING DELTA T	7 F
COOLING DELTA T	10 F
MAXIMUM HEAT LWT	80 F
MINIMUM COOL LWT	40 F
◀ PREVIOUS	SELECT ■

VARIABLE SPD INTERNAL PUMP CONFIGURATION	
LOOP OPTION	SINGLE
PUMP CONTROL	FIXED
HEATING STAGE 1	60%
COOLING STAGE 2	75%
COOLING STAGE 1	50%
COOLING STAGE 2	70%
◀ PREVIOUS	SELECT ■

MODULATING VALVE CONFIGURATION	
OFF POSITION	0.0
VALVE CONTROL DELTA T	
HEATING DELTA T	7 F
COOLING DELTA T	10 F
MAXIMUM HEAT LWT	80 F
MINIMUM COOL LWT	40 F
◀ PREVIOUS	SELECT ■

### 3.6 MULTI-UNIT CONFIGURATION

If multiple units are connected to one ATC thermostat upon unit start-up, the thermostat will automatically register the serial numbers of all units connected to it.

NOTE: Multiple units may be connected directly to the ATC thermostat or connected to one another in series, as shown by the figure below.

#### 3.6.1 MULTI-UNIT AIRFLOW SELECTION

In section 3.1, when an installer selects "Airflow Selection" from the System Configuration menu, the installer may choose the unit to configure by the last 4 digits of its serial number from the following screen.

#### 3.6.2 MULTI-UNIT OPTION SELECTION


In section 3.2, when an installer selects "Option Selection" from the System Configuration menu, the installer may choose the unit to configure by the last 4 digits of its serial number from the following screen.

#### 3.6.3 MULTI-UNIT, UNIT, PUMP, & VALVE CONFIGURATION



To configure Unit, Pump, and Valve options in sections 3.3-3.5, the thermostat must be connected to only one unit at a time.



Or

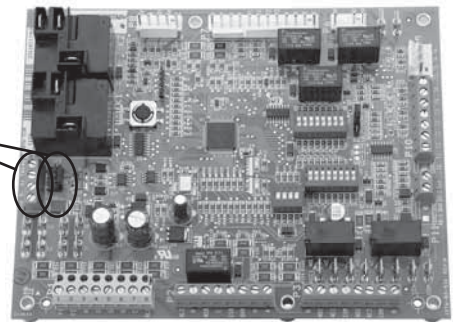

Two connections on DXM2 board to allow for multi-unit installation

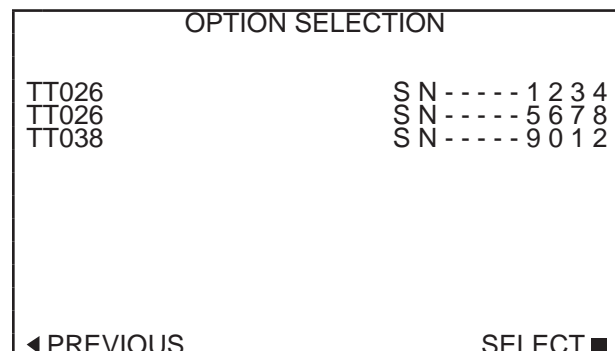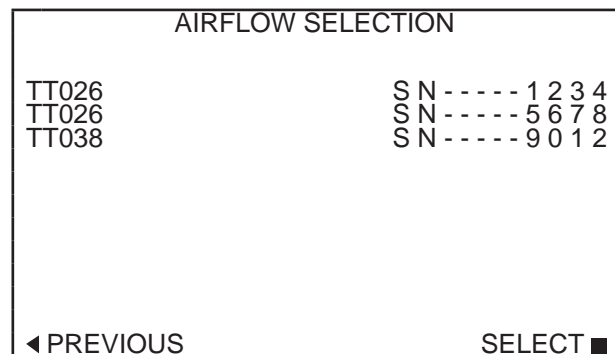

## 4.0 Service Mode

### 4.1 MANUAL OPERATION

Manual Operation mode allows service personnel to manually command operation for any of the thermostat outputs, blower speed, as well as pump speed or valve position to help troubleshoot specific components.

**NOTE 1:** The ECM Airflow adjustment will not be present if the connected communicating control (DXM2) is not configured for ECM (section 3.1).

**NOTE 2:** The Pump Speed adjustment will not be present if the connected communicating control (DXM2) is not configured for Pump (section 3.4).

**NOTE 3:** The Valve Position adjustment will not be present if the connected communicating control (DXM2) is configured for Valve (section 3.5).

### 4.2 CONTROL DIAGNOSTICS

Control Diagnostics mode allows service personnel to view the status of all physical inputs, switches and temperature sensor readings, as well as the operational status of the heat pump at the thermostat.

Navigate between diagnostic screens using the left/right arrow buttons.

**NOTE:** The Pump Status will not be present if the connected communicating control (DXM2) is not configured for Pump (section 3.4).

SERVICE MODE	
MANUAL OPERATION	
CONTROL DIAGNOSTICS	
DIPSWITCH CONFIG	
FAULT HISTORY	
CLEAR FAULT HISTORY	
SELECT OPTION ▲ ▼	
◀ PREVIOUS	SELECT ▶

MANUAL OPERATING MODE			
Y1	COMM	OUTPUT	OFF
Y2	COMM	OUTPUT	OFF
W	COMM	OUTPUT	OFF
O	COMM	OUTPUT	OFF
G	COMM	OUTPUT	OFF
H	COMM	OUTPUT	OFF
DH	COMM	OUTPUT	OFF
ECM	AIRFLOW		0
PUMP	SPEED		0%
TEST	MODE		OFF
SELECT OPTION ▲ ▼			
◀ PREVIOUS			SELECT ▶

CONTROL DIAGNOSTICS	
HP SWITCH	CL
LOC SWITCH	CL
Y1 PHYSICAL INPUT	ON
Y2 PHYSICAL INPUT	OFF
W PHYSICAL INPUT	OFF
O PHYSICAL INPUT	ON
G PHYSICAL INPUT	ON
H PHYSICAL INPUT	OFF
EMERG SHUTDOWN	OFF
NIGHT SETBACK	OFF
OVR INPUT	OFF
◀ PREVIOUS	NEXT ▶

CONTROL STATUS TEMPERATURES	
LT1 TEMP	38.1
LT2 TEMP	79.9
COMP DISCHARGE	157.7
HOT WATER EWT	121.5
LEAVING AIR	75.1
LEAVING WATER	73.3
ENTERING WATER	78.5
CONTROL VOLTAGE	26.4
ECM BLOWER RPM	550
ECM TARGET CFM	800
ECM BLWR STATIC	N/A
◀ PREVIOUS	NEXT ▶

CONTROL DIAGNOSTICS PUMP OPERATION	
PUMP SPEED	60%
PUMP WATTS	140
FLOW RATE GPM	7.4
◀ PREVIOUS	



### 4.3 DIPSWITCH CONFIGURATION

Dipswitch Configuration mode allows the service personnel to view the status of all dipswitch settings for the connected communicating control (DXM2/AXM) at the thermostat.

Navigate between configuration screens using the left/right arrow buttons.

**NOTE:** The unit control dipswitch settings cannot be changed from the thermostat or configuration/diagnostics tool.

```

CONTROL CONFIGURATION
DIPSWITCH S1
1  ON  UPS ENABLED
2  ON  DUAL COMP STG 1
3  ON  HEAT PUMP TSTAT
4  ON  RV O THERMOSTAT
5  ON  DEHUMID OFF
6  ON  EH2 AUX HEAT
7  ON  BOILERLESS
8  ON  SEE DXM2 AOM
    
```

◀ PREVIOUS NEXT ▶

#### S1 Dipswitch Status

```

CONTROL CONFIGURATION
DIPSWITCH S2
1  ON \ ACCESSORY 1
2  ON \ ACCESSORY 2
3  ON /

4  ON \ ACCESSORY 2
5  ON ACTIVE W/ COMP
6  ON /

7  ON H DEHUM INPUT
8  ON FACTORY SETTING
    
```

◀ PREVIOUS NEXT ▶

#### S2 Dipswitch Status

```

CONTROL CONFIGURATION
DIPSWITCH S3
1  ON  FACTORY SETTING
2  OFF HWG TEST OFF
3  OFF HWG SP 125
4  OFF HWG DISABLED

JW3 LT1 SETTING WELL
    
```

◀ PREVIOUS

#### S3 Dipswitch Status

### 4.4 FAULT HISTORY

Fault History mode displays the five most recent stored fault codes for the connected communicating control (DXM2).

Navigate between control fault codes using the up/down arrow buttons. Press the center button to view more information about the highlighted fault code.

```

TT038 SN -----0123
LAST 5 FAULTS
LT1 LOW WATER TEMP
NO FAULT
NO FAULT
NO FAULT
NO FAULT
    
```

◀ PREVIOUS NEXT ▶  
SELECT ■

#### Fault History

**4.4.0 Fault Conditions Menu**

FAULT CONDITION MENU	
LT1 LOW WATER TEMP HEAT 1 11:11 AM 11/14	
<b>FAULT TEMP CONDITIONS</b>	
FAULT FLOW CONDITIONS	
FAULT I/O CONDITIONS	
FAULT CONFIG COND	
FAULT POSSIBLE CAUSES	
◀ PREVIOUS	SELECT ■

**4.4.1 Temperature Conditions**

Displays detailed temperature readings that were recorded at the time the fault occurred

FAULT TEMPERATURE CONDITIONS	
LT1 LOW WATER TEMP HEAT 1 11:11 AM 11/14	
LT1 TEMP	28.1
LT2 TEMP	97.3
HOT WATER EWT	121.5
COMP DISCHARGE	157.7
LEAVING AIR	92.7
LEAVING WATER	34.9
ENTERING WATER	42.1
CONTROL VOLTAGE	26.4
◀ PREVIOUS	

**4.4.2 Flow Conditions**

Displays detailed blower and pump speed / valve position readings that were recorded at the time the fault occurred.

FAULT FLOW CONDITIONS	
LT1 LOW WATER TEMP HEAT 1 11:11 AM 11/14	
ECM TARGET CFM	800
ECM BLOWER RPM	550
FLOW RATE GPM	6.5
PUMP SPEED	60%
PUMP WATTS	140
LOOP CONFIG	VS PUMP
◀ PREVIOUS	SINGLE

FAULT FLOW CONDITIONS	
LT1 LOW WATER TEMP HEAT 1 11:11 AM 11/14	
ECM TARGET CFM	800
ECM BLOWER RPM	550
VALVE POSITION	10.0V
LOOP CONFIG	MOD VALVE
◀ PREVIOUS	MIN POS

**4.4.3 Input/Output Conditions**

Displays the status of all physical and communicated inputs, switches, and control outputs that were recorded at the time the fault occurred.

FAULT I/O CONDITIONS			
LT1 LOW WATER TEMP HEAT 1 11:11 AM 11/14			
TSTAT	SAFETY	OUTPT	
CONV COMM	HPS	CC	
Y1	LOC	RV	
Y2	CO	ACC1	
W		ACC2	
O	OUTPT	AL1	
G	FAN	EH1	
H	HWG	EH2	
OVR	PUMP		
◀ PREVIOUS			

**4.4.3 Configuration Conditions**

Displays the status of all dipswitch settings that were recorded at the time the fault occurred.

FAULT CONFG CONDITIONS					
LT1	LOW	WATER	TEMP		
HEAT	1	11:11 AM	11/14		
	S1	S2	S3		
1	ON	1 ON	1 ON		
2	ON	2 ON	2 OFF		
3	ON	3 ON	3 OFF		
4	ON	4 ON	4 OFF		
5	ON	5 ON			
6	ON	6 ON	LT1 WELL		
7	ON	7 ON	LT2 WELL		
8	ON	8 ON			
◀PREVIOUS					

**4.4.4 Possible Causes**

Displays possible causes as to why the fault occurred

POSSIBLE FAULT CAUSES	
LOW WATER COIL TEMP	
LOW WATER TEMP - HTG	
LOW WATER FLOW - HTG	
LOW REFRIG CHARGE - HTG	
INCORRECT LT1 SETTING	
BAD LT1 THERMISTOR	
◀PREVIOUS	

**4.5 CLEAR FAULT HISTORY**

Clear Fault History will clear all fault codes stored in the thermostat as well as the fault history in any connected communicating controls (DXM2/AXM).

## 5.0 Revision History

Date	Page #	Description
11 Feb., 14	All	ACDU01 Updated to ACDU02
23 Oct. 12	4-7	Unit Config, Pump Config and Valve Config Sections Updated
8 May, 12	All	First Published



**CLIMATEMASTER**  
 Geothermal Heat Pump Systems  
 7300 S.W. 44th Street  
 Oklahoma City, OK 73179  
 Phone: 405-745-6000  
 Fax: 405-745-6058  
 climatemaster.com



97B0106N01

ClimateMaster works continually to improve its products. As a result, the design and specifications of each product at the time for order may be changed without notice and may not be as described herein. Please contact ClimateMaster's Customer Service Department at 1-405-745-6000 for specific information on the current design and specifications. Statements and other information contained herein are not express warranties and do not form the basis of any bargain between the parties, but are merely ClimateMaster's opinion or commendation of its products.

The management system governing the manufacture of ClimateMaster's products is ISO 9001:2008 certified.